



ATTENTION:

VERY IMPORTANT

Before unloading and unpacking the machine, read section 5 of this manual for unloading and unpacking instructions.

Failure to do so may result in the forfeiture of the warranty.

ORION PACKAGING INC.

NOTICE

In order to acquire more information about custom make features of the machine; and to provide quicker service, the following information is required when making an inquiry for a machine:

- 1) Serial Number
- 2) Model Number
- 3) Subassembly-Part Location

L66

OWNER'S MANUAL


Orion Packaging Inc.
4263 Richelieu
Montreal H4C 1A1
Tel.: 514-937-6642

TABLE OF CONTENTS

| | |
|--|----|
| 1. L66 SPECIFICATIONS | 1 |
| 2. STANDARD FEATURES | 2 |
| 3. OPTIONS | 3 |
| 4. PARTS LISTS | |
| 4.1 Tower Parts List | 4 |
| 4.2 Carriage Parts List | 6 |
| 4.3 Base And Turntable Parts List | 9 |
| 5. MACHINE INSPECTION AND INSTALLATION | |
| 5.1 Inspection Upon arrival | 11 |
| 5.2 Installation | 11 |
| 6. MACHINE CONTROLS | 13 |
| 6.1 Power Switch | 14 |
| 6.2 Start And Stop Switches | 14 |
| 6.3 Spiral Wrap Switch | 14 |
| 6.4 Table Jog Switch | 15 |
| 6.5 Carriage control switch | 15 |
| 6.6 Photocell Switch | 15 |
| 7. CYCLE CONTROL SWITCHES | |
| 7.1 Film Tension | 17 |
| 7.2 Top And Bottom Wraps | 17 |
| 7.3 Carriage Speed | 18 |
| 8. MACHINE MAINTENANCE | |
| 8.1 Speed Reducer Maintenance | 19 |
| 8.2 Motor Maintenance | 19 |



| | |
|------------------------------|----|
| 8.3 Chain Maintenance | 20 |
| 8.4 Cam Follower Maintenance | 20 |
| APPENDIX | 21 |

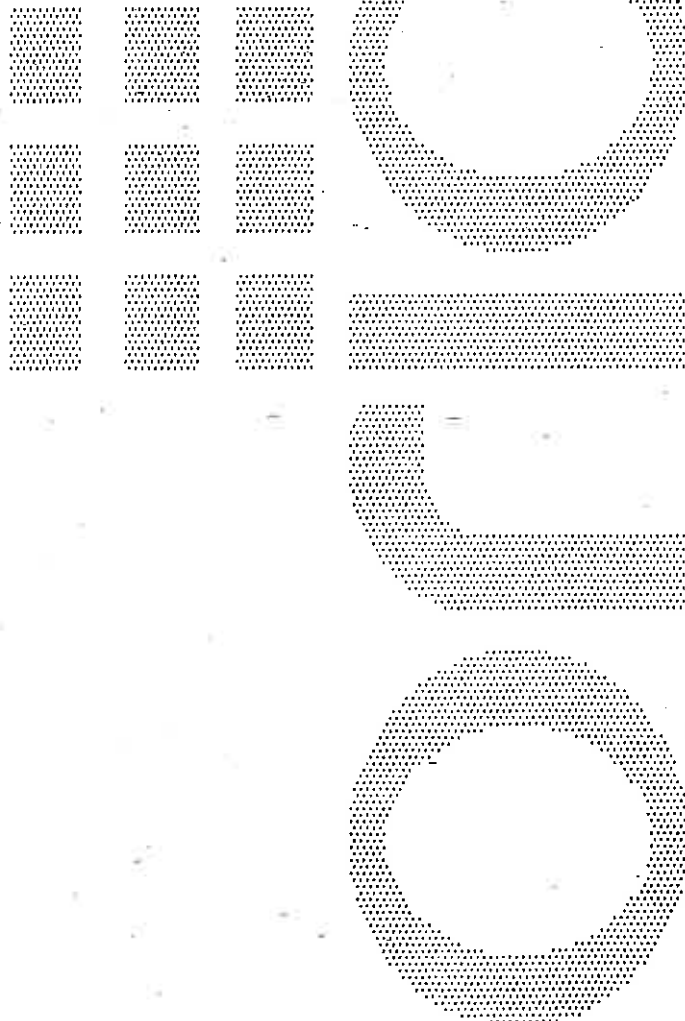

ORION PACKAGING SYSTEMS, INC.
DISTRIBUTOR PRICE LIST - EFFECTIVE NOVEMBER 1, 1989

ORION MODEL L-66

Spiral Semi-Automatic Medium Heavy Duty Low Profile

| | |
|----------------------|--|
| Maximum Load Size | 56"W x 56"L x 84"H (Recommended) 62"W x 62"L x 87"H (Theoretical)* |
| Weight Capacity | 4,000 lbs. dynamic, 20,000 lbs. static |
| Utilities | 115/1/60 20 Amp Electrical Service |
| Turntable | 60" Diameter 3/8" Steel Plate Steel Cam Follower Support System Self Lubricating System with Reservoir 3" Height Floor to Top of Turntable |
| Turntable Drive | 0-12 RPM Variable Turntable Speed 1/2 HP DC Drive Motor #50 Roller Chain Drive with Tensioner Electronic Soft Start Positive Alignment Feature |
| Control Features | Electronic Film Force Control Separate Top and Bottom Wrap Selectors Variable Speed Film Carriage Control Auto-Height Photocell w/On/Off Switch Film Carriage Raise/Lower Switch Turntable Jog Pushbutton Spiral Up or Up/Down Cycles Current Overload Protection NEMA 12 Electrical Enclosure |
| Film Delivery | 20" Orion MultiStretch Power Prestretch Electronic Film Tension Control End of Cycle Film Force Release Full Authority Film Dancer Bar Timing Gear/Belt Stretch Ratio Control 1/3 HP DC/SCR Film Drive |
| Film Carriage Drive | #50 Roller Chain Carriage Lift 1/3 HP Elevator Drive Motor Variable Speed SCR Control Precision Cam Follower Tracking |
| Structural Features | Forklift Portable Base Design Unique Steel Ring Cam Follower Support Steel Protection Ring Surrounding Table All Structural Steel Construction Film Roping Bar 8" x 18 lb./ft. "H" Channel Mast |
| Est. Shipping Weight | 1,200 lbs. |

*Theoretical is based upon removal of roping bar, and reflects the maximum film web height attainable

HINGED TOWER (FOR TRANSPORT)

All Series (Except "M")

ORION PACKAGING INC.

DISTRIBUTOR PRICE LIST - EFFECTIVE NOVEMBER 1, 1989

SEMI-AUTOMATIC MACHINE OPTIONS

AUTO-HEIGHT PHOTOCELL

77 series.....

LOADING RAMPS FOR LOW PROFILES

L77/66.....

L55S/44S.....

L55/44.....

L66-72.....

MACHINE BASE EXTENSIONS (MAX. 3 FT)

H77/66 (per foot).....

L77/66 (per foot).....

H55/44 (per foot).....

L55/44 (per foot).....

L55S/44S (per foot).....

MACHINE MAST EXTENSIONS (MAX. 3 FT)

All Series (Except "M") (first foot).....
(each additional foot).....

M77/67/66 (per foot).....

M57/55 (per foot).....

M44 (per foot).....

HINGED TOWER (FOR TRANSPORT IN LOW TRUCKS)

All Series (Except "M").....

ORION PACKAGING INC.
DISTRIBUTOR PRICE LIST - EFFECTIVE NOVEMBER 1, 1989

SEMI-AUTOMATIC MACHINE OPTIONS

PNEUMATIC TOP PLATENS

36" circular platen with 24" stroke.....
36" circular platen with 36" stroke.....
48" x 48" square platen with homing.....
device, and 36" stroke
48" x 48" square platen with homing.....
device, and 48" stroke

TRANSFORMER

To accept 430/60 or 575/60.....
For each additional conveyor section.....

DUAL TURNTABLE OPTION

L66.....
H66.....
L55/44.....
H55/44.....
L55S/44S.....

NOTE: Dual Turntable options includes second
turntable with all drive components &
controls, second auto-height photocell,
and table selector switch.

NOTE: When a ring gear/pinion gear turntable
drive is required, the cost of 2 ring
gear options must be added to the dual
turntable option price.

RING GEAR/PINION GEAR TURNTABLE DRIVE

H66....(20" DIA.).....
H55....(25" DIA.):.....
H44....(33" DIA.).....

Central lubrication point for ring gear.....

ORION PACKAGING INC.

Revised DISTRIBUTOR PRICE LIST - EFFECTIVE NOVEMBER 1, 1989

SEMI-AUTOMATIC MACHINE OPTIONS

PROGRAMMABLE LOGIC CONTROLLER OPTIONS

66/55 Series - Allen Bradley SLC-100.....

44 Series - Allen Bradley SLC-150.....

EEPROM ordered with machine.....

EEPROM ordered after shipping of the machine.....

CYCLE COUNTER (inside control panel).....

TURNTABLE OPTIONS

0-12 RPM Variable Speed Turntable Drive for.....
L/H 77 Models

0-12 RPM Variable Speed Turntable Drive with.....
Positive Alignment Feature for L/H 77 Models

10,000 lb Capacity (H55/44).....

8,000 lb Capacity (L55/44).....

10,000 lb Capacity (L55/44).....

Anti-Skid Surface.....

72" dia. round, 3/8" with 4" skirt (H55/44).....

72" dia. round, 1/2" (L44/44S, L55/55S).....

72" dia. round, 1/2" (L66).....

72" dia. round, 3/8" (L66).....

60" dia. round, 1/2" (L66/55/44).....

Reinforced Concentric Rings.....

Remote Pull Switch.....

Filler Plate (H77/66).....

Filler Plate (H55/44).....

ORION PACKAGING INC.
DISTRIBUTOR PRICE LIST - EFFECTIVE NOVEMBER 1, 1989

SEMI-AUTOMATIC MACHINE OPTIONS

COLD TEMPERATURE OPTIONS (-20 F)

Heated Control Enclosure, Silicon Rubber Wiring.....
and Special Lubricant in Reducers

CONVEYOR OPTIONS

IDLER ROLLER (NON-DRIVEN)

72" Dia. idler roller turntable for H66/55/44.....
(On H-66, requires ring gear option and
max. wt. 2,500 lbs) Rollers are 3.5" Dia.
on 4.5" centers, with manual brake.

72" Dia. idler roller turntable for L55S/44S.....
Rollers are 3.5" Dia. on 4.5" centers, with
manual brake.

Pneumatic Roller Brake for "L" Series.....

Pneumatic Roller Brake for "H" Series.....

5' Length CONTOURED Idler Roller Conveyor,.....
3.5" Dia. Rollers on 4.5" Centers, 50" Wide
Roller Face.

5' Length STRAIGHT Idler Roller Conveyor,.....
3.5" dia. rollers on 4.5" centers,
50" wide roller face.

POWERED ROLLER

55 STYLE (Powered Roller Turntable)

76" Dia. powered roller TURNTABLE, Rollers.....
rollers 3.5" dia. on 4.5" centers, all full
length driven. Includes 1/2 hp AC drive,
adjustable speed. Wall tubing 1/8"
(H55/44 only - requires ring gear option)

ORION PACKAGING INC.
DISTRIBUTOR PRICE LIST - EFFECTIVE NOVEMBER 1, 1989

SEMI-AUTOMATIC MACHINE OPTIONS

44 STYLE (Powered Roller Turntable)

76" Dia. Powered Roller TURNTABLE, Rollers.....
3.5" Dia. on 4.5" Centers, All Full Length
Driven. Includes 1/2 hp DC Drive, Adjust-
able Speed. Wall Tubing 3/16", Cast Iron
Pillow Blocks. (NOTE: H55/44 only, requires
RING GEAR OPTION)

55 STYLE (CONTOURED Powered Roller Conveyor)

5' Length CONTOURED Powered Roller Conveyor,.....
3.5" Dia. Rollers on 4.5" Centers, 50"
Effective Width, All Full Length Rollers
Driven. Includes 1/2 hp AC Drive, Non-
Reversing. Wall tubing 1/8"

44 STYLE (CONTOURED Powered Roller Conveyor)

5' Length CONTOURED Powered Roller Conveyor,.....
3.5" Dia. Rollers on 4.5" Centers, 52"
Effective Width, All Full Length Rollers
Driven, Cast Iron Pillow Blocks.
Includes 1/2 hp DC Drive, Variable
Speed, with Soft Start.

Automatic Sequencing, Logic and Photocell.....
For Powered Conveyor (Per Section) - Includes
Photocell PLC Input and Output/Program.

Turntable Mechanical Home Position Lock.....
(Pneumatic, Positive Lock)

ORION PACKAGING INC.
DISTRIBUTOR PRICE LIST - EFFECTIVE NOVEMBER 1, 1989

SEMI-AUTOMATIC MACHINE OPTIONS

FILM CARRIAGE OPTIONS

Double #60 Chain Carriage Lift.....

20" Multistretch Retrofit Carriage.....
(For Installation on Existing Machines)

30" Multistretch Retrofit Carriage.....
(For Installation on Existing Machines)

30" Multistretch Carriage Upgrade from 20".....
on H66/55/44 and L66/55/66.

30" Multistretch Carriage Upgrade from 20".....
on M66/55/44.

30" Econostretch Carriage Upgrade on 77
Series from 20".

ELECTRONIC SCALE PACKAGE OPTION

Includes Heavy Duty Load Cells Incorporated.....
into the Machine or Conveyor Frame, Protected
from Lateral Shock, and a Digital Display of
Load Weight, with RS-232C Port, Gross, Net
Tare, Zero.

NOTE: On L-77 and L-66 models, scale option
reduces machine capacity to 2500 lbs.,
unless base reinforcement option is
ordered.

Base Reinforcement on L-77 or L-66 models,.....
when 4000 lbs capacity is desired with
scale package.

4. PARTS LISTS

4.1 Tower Parts List


The exploded assembly drawing of the Small Tower is shown on drawing number 200 190. Table 1 has the parts listed in order of part number. Note: the names given to the parts are generic.

TABLE 1

Tower Parts List

| Part Number | Description | Quantity |
|-------------|------------------------------|----------|
| 10067 | Cam follower (1/2 inch O.D.) | 4 |
| 10330 | 10-24 UNC x 2 long SHCS | 2 |
| 10331 | Knob | 2 |
| 10332 | Limit switch | 2 |
| 10333 | Limit switch bracket | 2 |
| 10334 | Channel guide | 2 |
| 10335 | Channel | 1 |
| 10336 | 1/4-20 UNC x 1/2 long SHCS | 2 |
| 10337 | Chain cover | 1 |
| 10338 | Limit switch actuator | 1 |
| 10339 | Right carriage holder | 1 |
| 10340 | 3/8-16 UNC x 1 long hex bolt | 2 |
| 10341 | Chain tensioner | 1 |
| 10342 | Tower | 1 |
| 10343 | Elevator driver sprocket | 1 |

| | | |
|-------|-------------------------------|---|
| 10344 | Reducer (40:1) | 1 |
| 10345 | 1/4-20 UNC x 1/2 long SHCS | 3 |
| 10346 | Motor (1/3 hp, 90 VDC) | 1 |
| 10347 | 5/16-18 UNC x 1 long hex bolt | 4 |
| 10348 | 3/16 square key | 1 |
| 10349 | Chain link pin | 2 |
| 10350 | Chain | 1 |
| 10351 | 3/8-16 UNC x 2 long hex bolt | 4 |
| 10384 | 1" collar | 2 |
| 10385 | Elevator idler sprocket | 1 |
| 10386 | Left carriage holder | 1 |
| 10387 | Chain tensioning screw | 2 |

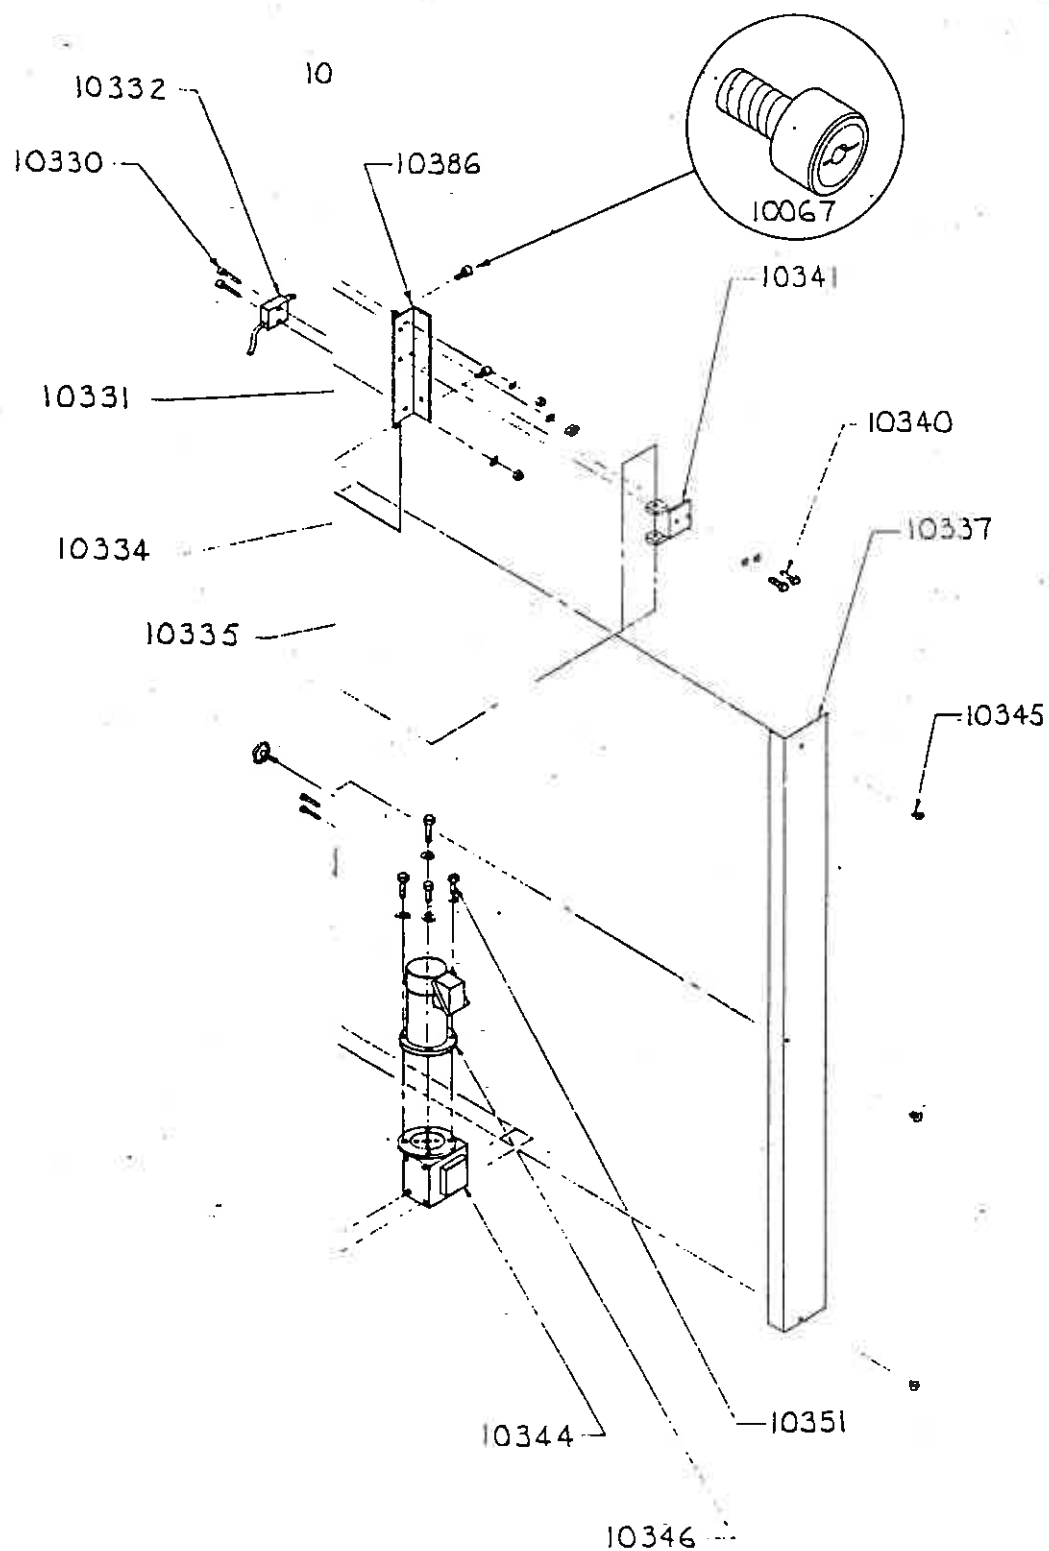

| ORION PACKAGING | | |
|-------------------|--------------|---------------------------|
| SCALE: N.T.S. | APPROVED BY: | DESIGNED BY (A.L.N.P.I.) |
| DATE: 3-7-86 | | APPROVED: |
| SMALL TOWER ASS'Y | | |
| H66 L66 H77 L77 | | QUANTITY ORDERED: 200-190 |

4.2 CARRIAGE PARTS LIST

The exploded assembly drawing of the Standard carriage is shown on drawing number 200 100.

Table 2 has the parts listed in order of part number. Note the names given to the parts are generic.


TABLE 2

Carriage Parts List

| Part Number | Description | Quantity |
|-------------|--------------------------------|----------|
| 10010 | Cam follower (1 3/8 inch O.D.) | 1 |
| 10017 | Roller bracket | 1 |
| 10020 | Multistretch mechanism cover | 1 |
| 10021 | Spacer | 1 |
| 10022 | Belt tensioner | 1 |
| 10023 | 30" Pressure roller | 1 |
| 10024 | 20" Pressure roller | 1 |
| 10026 | 30" Center dancer roller | 1 |
| 10027 | 30" Roller | 1 |
| 10030 | Top dancer lever | 1 |
| 10031 | Bottom dancer lever | 1 |
| 10033 | 20" Center dancer roller | 1 |
| 10034 | 20" Roller | 1 |
| 10037 | 30" x 3" dia. rubber roller | 1 |
| 10038 | 30" x 4" dia. rubber roller | 1 |
| 10039 | 20" x 3" dia. rubber roller | 1 |
| 10040 | 20" x 4" dia. rubber roller | 1 |
| 10042 | 3/4" flanged bearing unit | 2 |

| | | |
|-------|---|---|
| 10043 | 1" Pillow block | 1 |
| 10044 | Prestretch driver pulley | 1 |
| 10045 | Potentiometer coupling | 1 |
| 10046 | Potentiometer bracket | 1 |
| 10047 | Film tension spring | 2 |
| 10048 | Spring adjustment screw | 2 |
| 10049 | Brake pad | 2 |
| 10050 | Film spool mandrel | 1 |
| 10051 | Top mandrel | 1 |
| 10052 | 1" Collar | 6 |
| 10054 | Bottom mandrel | 1 |
| 10058 | Bronze bushing | 2 |
| 10061 | Prestretch transmission (5:1 worm & gear) | 1 |
| 10068 | Cover bracket | 2 |
| 10091 | Channel guide | 1 |
| 10092 | Knob | 1 |
| 10118 | Photoswitch | 1 |
| 10121 | Channel bracket | 1 |
| 10122 | 30" Channel | 1 |
| 10133 | Prestretch driven pulley | 1 |
| 10146 | Timing belt | 1 |
| 10155 | 20" Channel | 1 |
| 10156 | Photoswitch bracket | 1 |
| 10157 | 3/4 inch pillow block | 1 |
| 10227 | 3/16 inch square key | 1 |
| 10296 | Channel screw | 2 |
| 10297 | 3/16 inch square key | 1 |

| | | |
|-------|-------------------------------------|---|
| 10298 | 3/8-16 UNC x 1 long hex bolt | 6 |
| 10299 | Multistretch cover screw | 3 |
| 10300 | 3/8-16 UNC x 2 long SHCS | 1 |
| 10301 | 5/16-18 UNC x 2 1/2 long Hex bolt | 4 |
| 10302 | 8-32 UNC x 1/2 long BHCS | 8 |
| 10303 | Bumper | 2 |
| 10304 | 10-24 UNC x 3/4 long SHCS | 2 |
| 10305 | 5/16-18 UNC x 3/4 long SHCS | 2 |
| 10306 | 1/4-20 UNC x 3/4 long CHCS | 2 |
| 10307 | Feedback potentiometer | 1 |
| 10308 | 10-24 UNC x 1/2 long SHCS | 2 |
| 10309 | 1/4" square key | 1 |
| 310 | 10-24 UNC x 1 long SHCS | 2 |
| 10368 | 3/8-16 UNC x 1 long hex bolt | 4 |
| 10425 | 3/4" collar | 1 |
| 10458 | 20" Carriage frame | 1 |
| 10459 | 30" Carriage frame | 1 |
| 30095 | Prestretch motor (1/3 hp, 1750 rpm) | 1 |

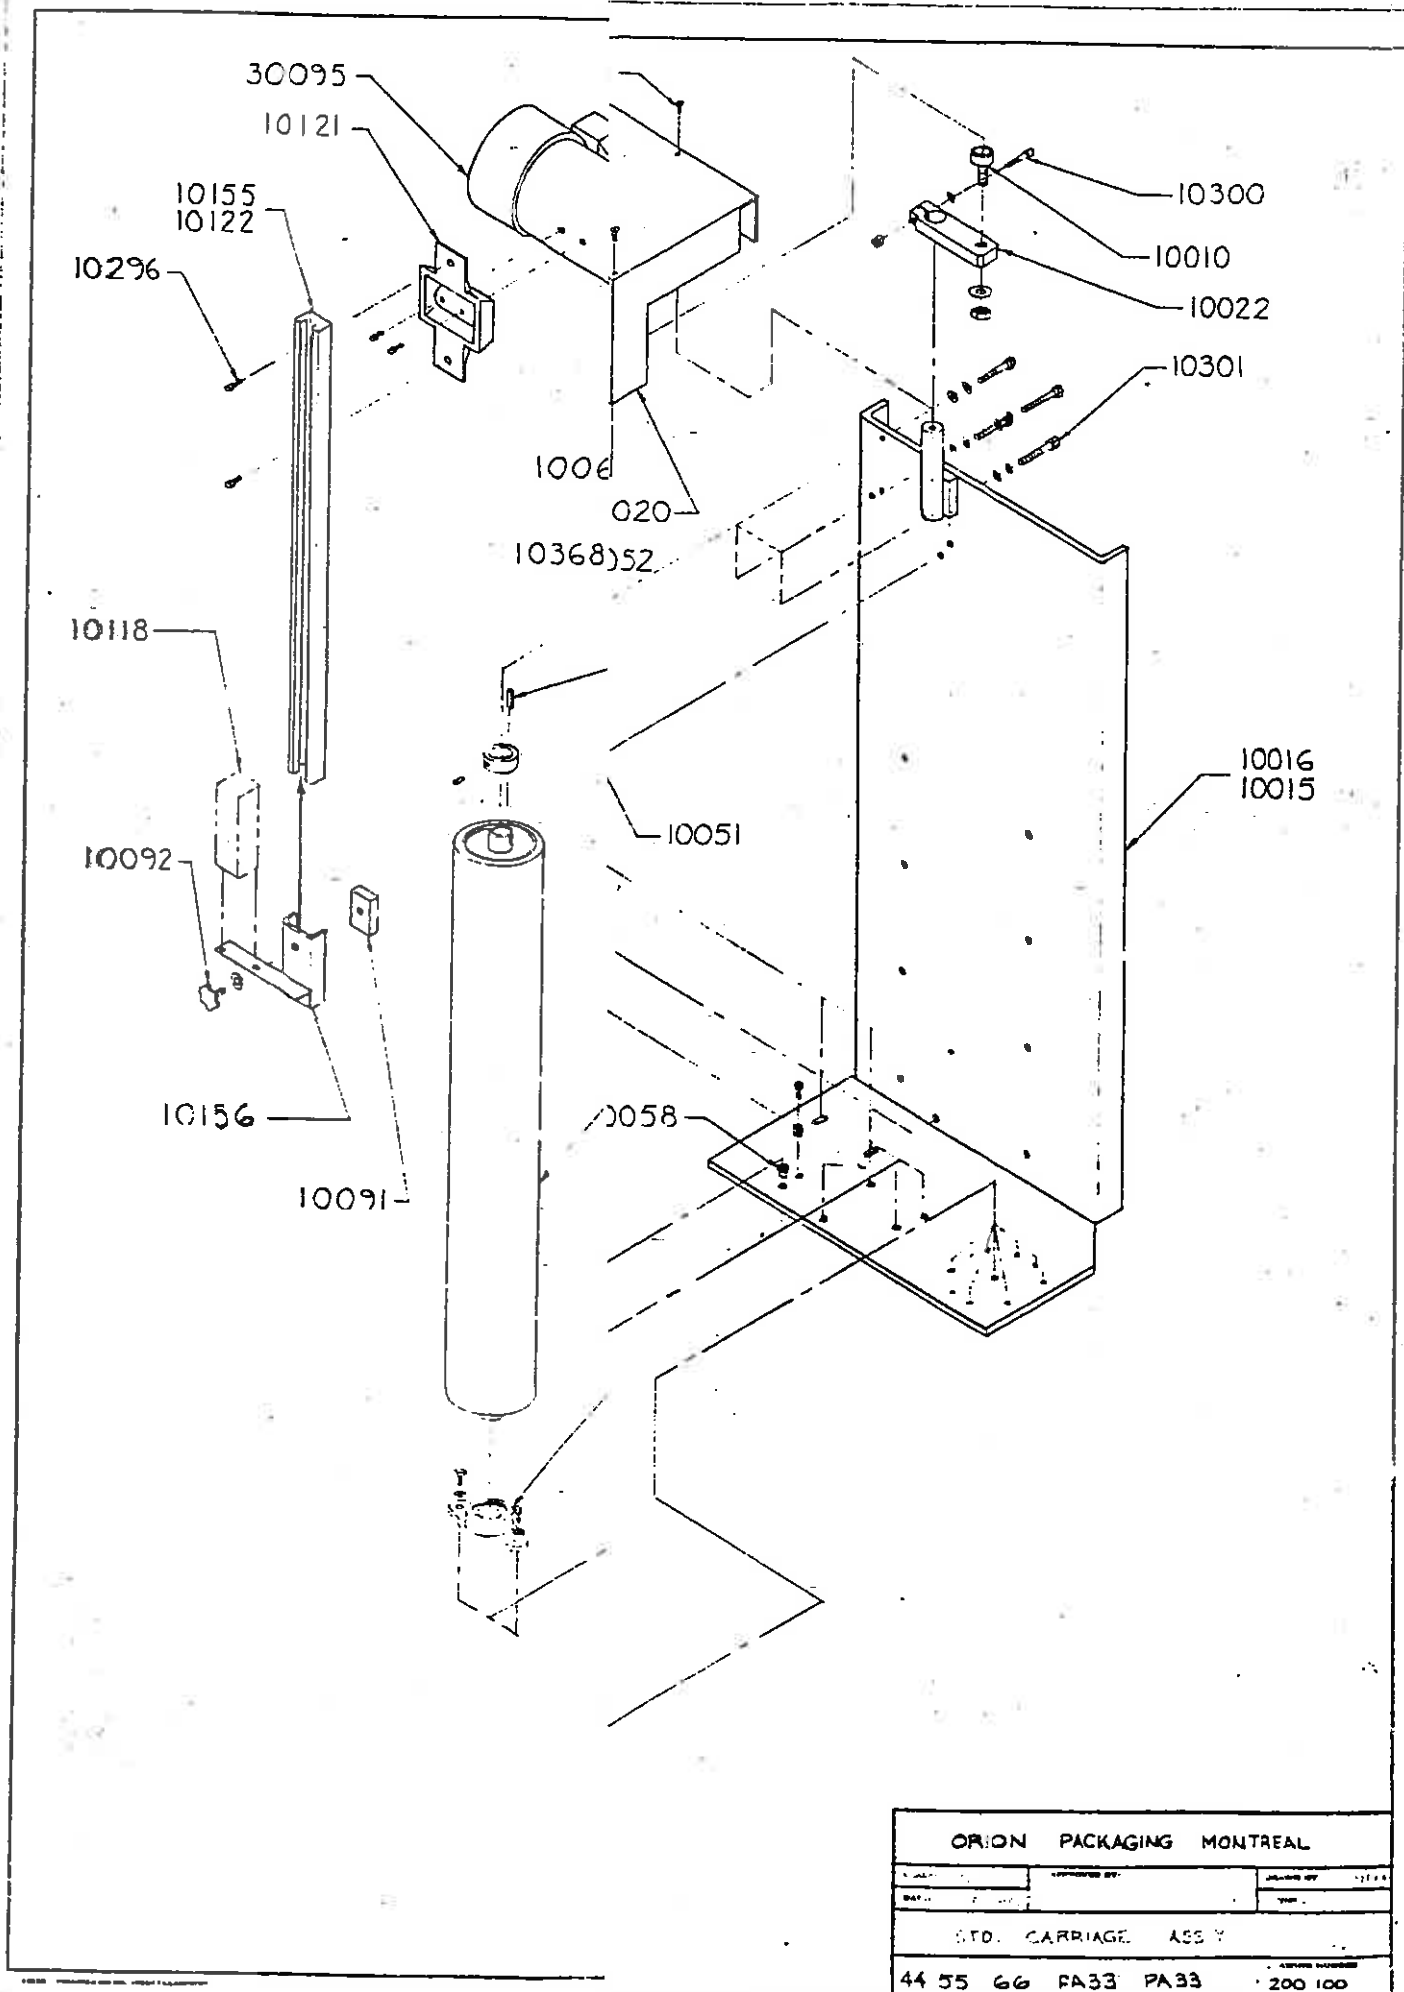

| | | |
|--------------------------|-------------|-------------|
| ORION PACKAGING MONTREAL | | |
| DATE | APPROVED BY | DESIGNED BY |
| 44 55 66 | PA33 | PA33 |
| STD. CARRIAGE ASSY | | |
| 200 100 | | |

4.3 Base And Turntable Parts List


The exploded assembly drawing of the Small, Low Profile base is shown on drawing number 200 195. Table 3 has the parts listed in order of part number. Note, the names given to the parts are generic.

TABLE 3

Base And Turntable Parts List

| Part Number | Description | Quantity |
|-------------|------------------------------|----------|
| 10006 | Turntable sprocket | 1 |
| 10007 | Center bearing unit | 1 |
| 10008 | Idler sprocket | 1 |
| 10009 | #50 Chain | 1 |
| 10010 | Cam follower (1 3/8" O.D.) | 9 |
| 10035 | Reducer | 1 |
| 10124 | Proximity switch | 1 |
| 10222 | Driver sprocket (H55) | 1 |
| 10228 | Motor (1/2 hp, DC) | 1 |
| 10229 | Turntable | 1 |
| 10230 | Roping bar | 1 |
| 10231 | Proximity switch bracket | 1 |
| 10232 | Chain tensioner | 1 |
| 10233 | Chain tensioning screw | 1 |
| 10234 | Small base | 1 |
| 10368 | 3/8-16 UNC x 1 long hex bolt | 4 |
| 10370 | 3/16 square key (10295) | 2 |
| 10371 | Chain cover | 1 |

| | | |
|-------|----------------------------------|---|
| 10372 | 1/4-20 UNC x 1 long CHCS | 2 |
| 10373 | 3/8-16 UNC x 1 long CHCS | 2 |
| 10374 | 5/8-11 UNC x 1 1/2 long hex bolt | 1 |
| 10375 | 3/8-16 UNC x 1 long hex bolt | 2 |
| 10376 | 10-24 UNC x 2 long BHCS | 2 |
| 10377 | 10-24 UNC x 1/2 long SHCS | 2 |
| 10379 | 3/8-16 UNC x 1 1/2 long hex bolt | 4 |
| 10380 | 1/2-13 UNC hex nut | 9 |
| 10381 | 3/8-16 UNC x 1 1/2 long SHCS | 4 |
| 10382 | 5/16-18 UNC x 3/4 long hex bolt | 4 |

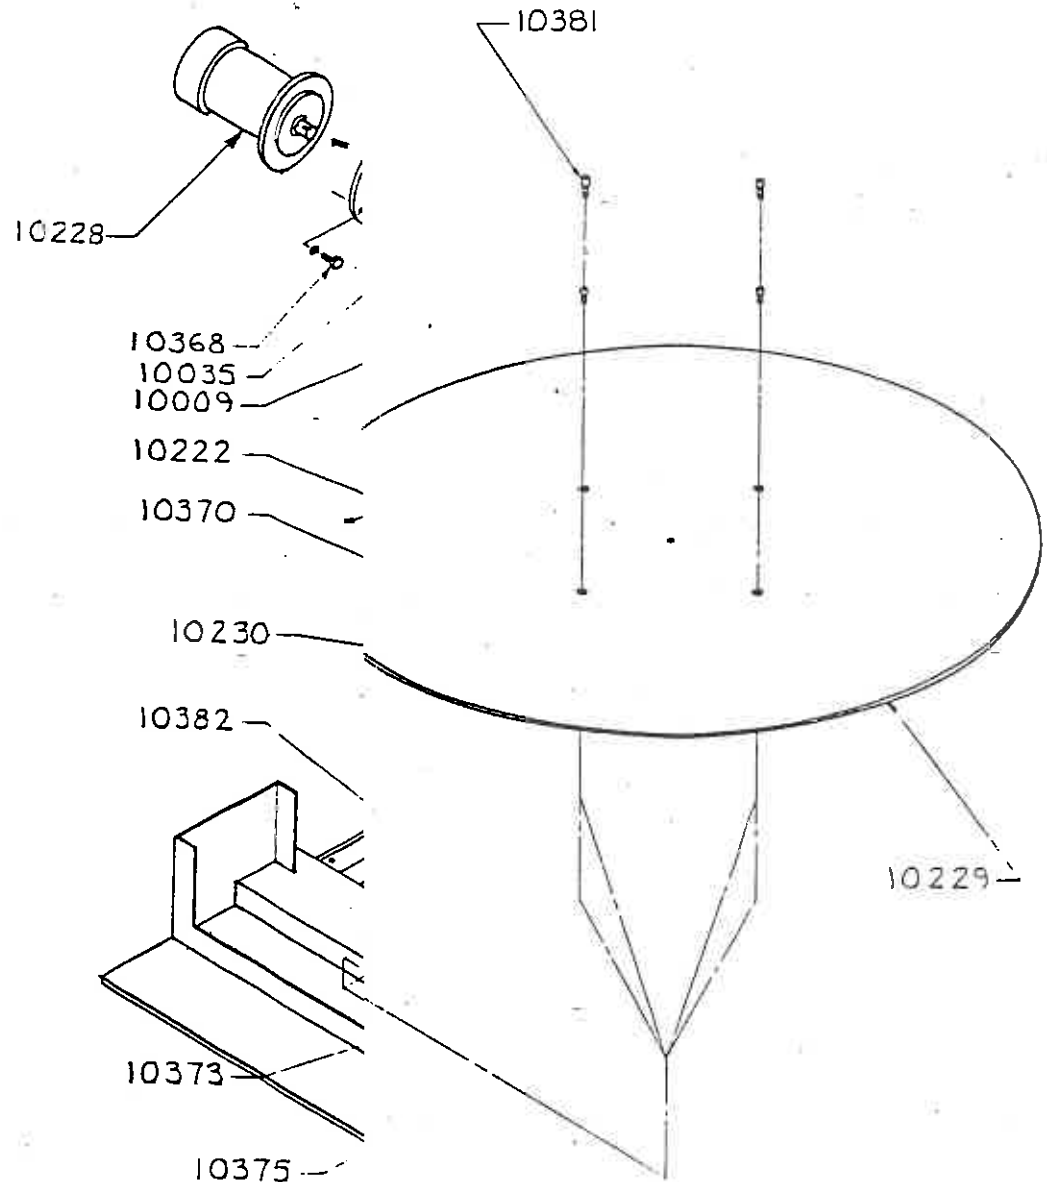

| | | |
|------------------------------|--------------|---------------------------|
| ORION PACKAGING MONTREAL | | |
| SCALE: N.T.S. | APPROVED BY: | DRAWN BY: VALLIN (M) |
| DATE: 16-7-86 | | REVISED |
| SMALL LOW PROFILE BASE ASS'Y | | |
| L66 L77 | | DRAWING NUMBER 200 195 |

5. MACHINE INSPECTION AND INSTALLATION

5.1 Inspection Upon Arrival

CAUTION: When unloading the stretchwrapper, care must be taken not to lift it by the turntable. The forks of the forklift should be inserted in the 6 inch slots behind the tower to lift the machine.

Before inspection, all packing and restraining blocks must be removed; these may include the blocks under the carriage and the bolts holding the ramp on the table.

CAUTION: When cutting the stretchwrap material covering the machine, care must be taken not to cut any of the electrical lines.

A visual inspection of all the electrical connections should be performed after unpacking the machine to check for loosened joints or broken connections. Any suspected shipping damage must be reported immediately to the freight carrier.


Items that are vulnerable to damage and must be inspected are the motor and transmission housings and connections at the base of the tower, and on the carriage, the photoswitch on the carriage, and the roping bar and stands.

5.2 Machine Installation


After the visual inspection has been performed, the customer is required to provide the electrical power requirements as outlined in the specifications (sections 1, 2, and 3 of this manual).

An electrical diagram is provided in the panel box. Only a qualified electrical technician or an Orion representative should effect any repairs on the machines.

Before operating the machine the oil pockets underneath the table should be checked and filled if any oil is missing (see section 8.4).

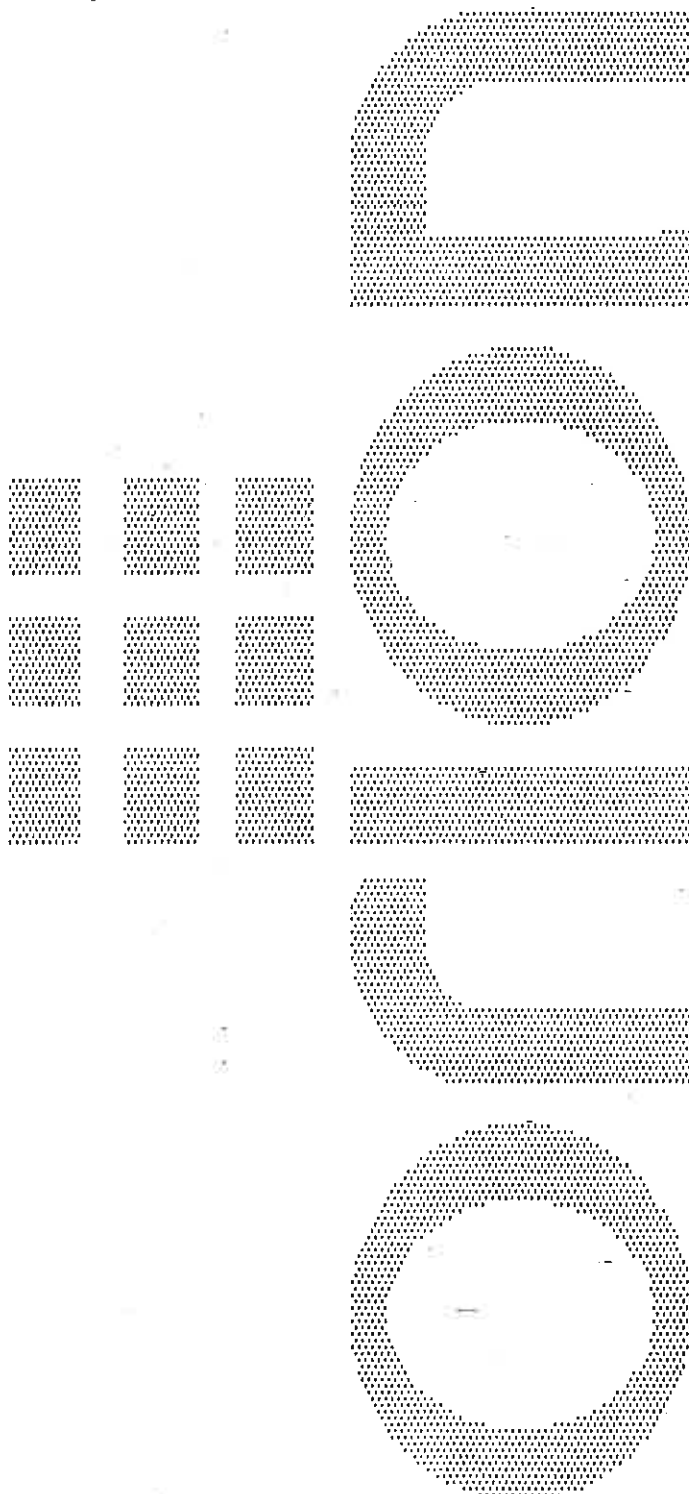

MACHINE CONTROLS

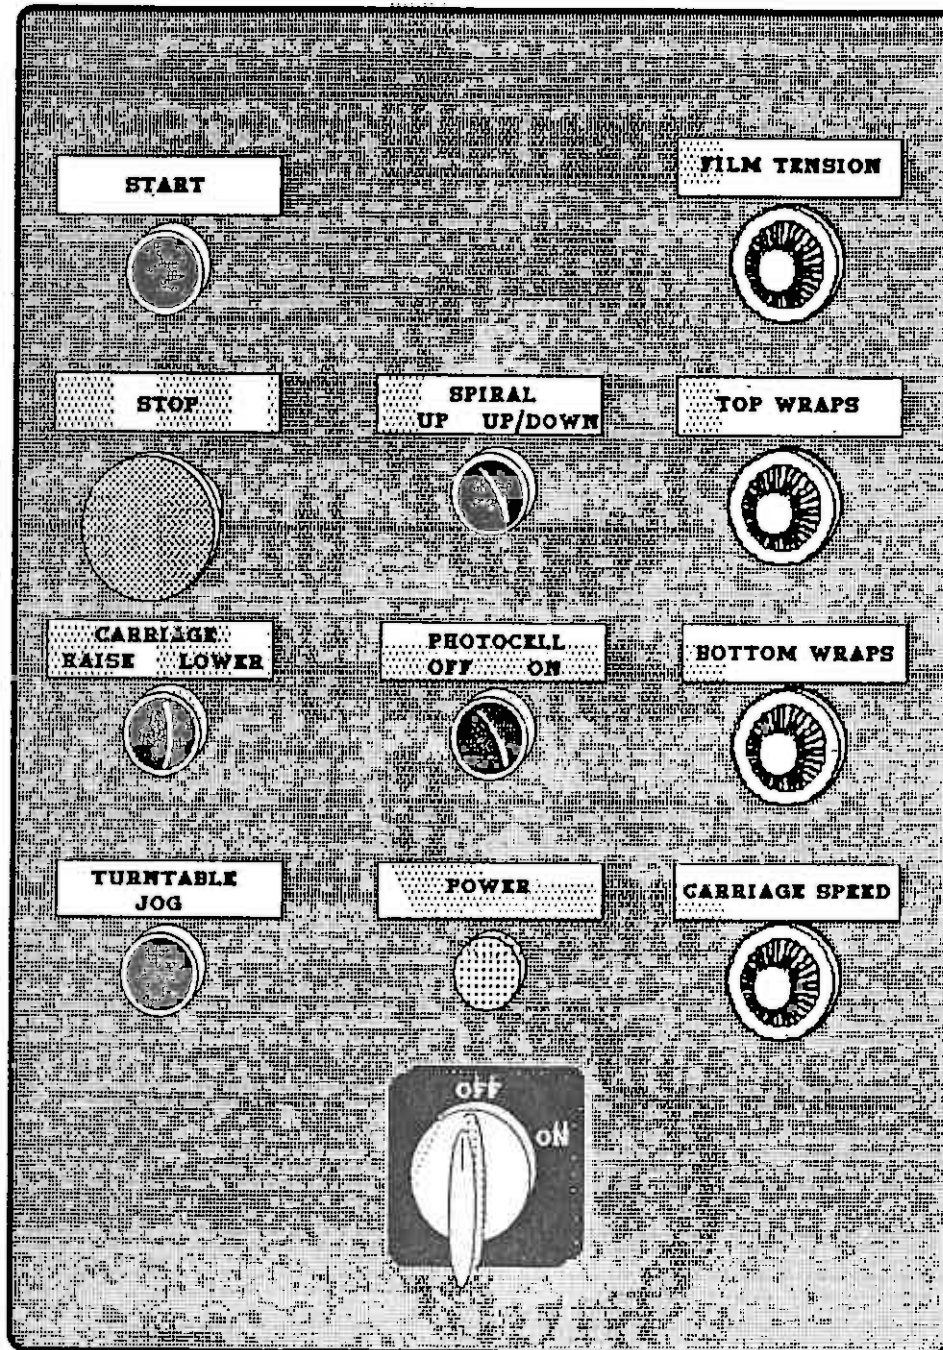

6.1 Power Switch

The Power Switch has two settings,

ON - Connects a 110 VAC power source to the machine,

OFF - Disconnects the power source.

6.2 Start And Stop Switches

The Start switch is used to start the cycle once the load is on the turntable. The cycle may be stopped at any time by pressing the Stop button.

NOTE: if the Stop button is pressed in the middle of the cycle, the carriage and turntable may be returned to their home positions by using the jog buttons before restarting the cycle.

6.3 Spiral Wrap Switch

The Spiral Wrap switch has two positions,

UP - In the UP position the cycle will end after completing the specified number of top wraps, therefore, the machine will only wrap the load once, going up.

UP/DOWN - In the UP/DOWN position the cycle is complete after the load is wrapped in both the up and down directions.

6.4 Turntable Jog Switch

The Turntable jog switch is a pushbutton switch that will turn the turntable in a clockwise direction (as viewed from the top) when the switch is held depressed. When the switch is released the turntable will stop.

The switch is inoperative during the wrap cycle.

6.5 Carriage Control Switch

The Carriage Control switch is a monostable three position switch with the following settings,

RAISE - Raises the carriage until the top limit switch on the tower is activated or until the photoswitch senses that the top of the load has been reached.

LOWER - Lowers the carriage until the bottom limit switch on the tower is activated.

The switch is normally in the middle position where the carriage remains stationary. Turning the switch to the RAISE or LOWER position will activate the carriage to move in its respective direction.


6.6 Photocell Switch

The Photocell switch has two settings,

ON - When turned ON, the photocell senses whether or not the carriage has reached the top of the load. The carriage will stop and begin the top wraps sequence once the top of the load is reached. The carriage will always stop at the top of the load regardless of its height. The photoswitch's position on the track can be

adjusted in order to make the carriage pass the top of the load and overlap the top.

OFF - When turned OFF, the photocell is inoperative and the carriage will stop only once the top limit switch has been activated.

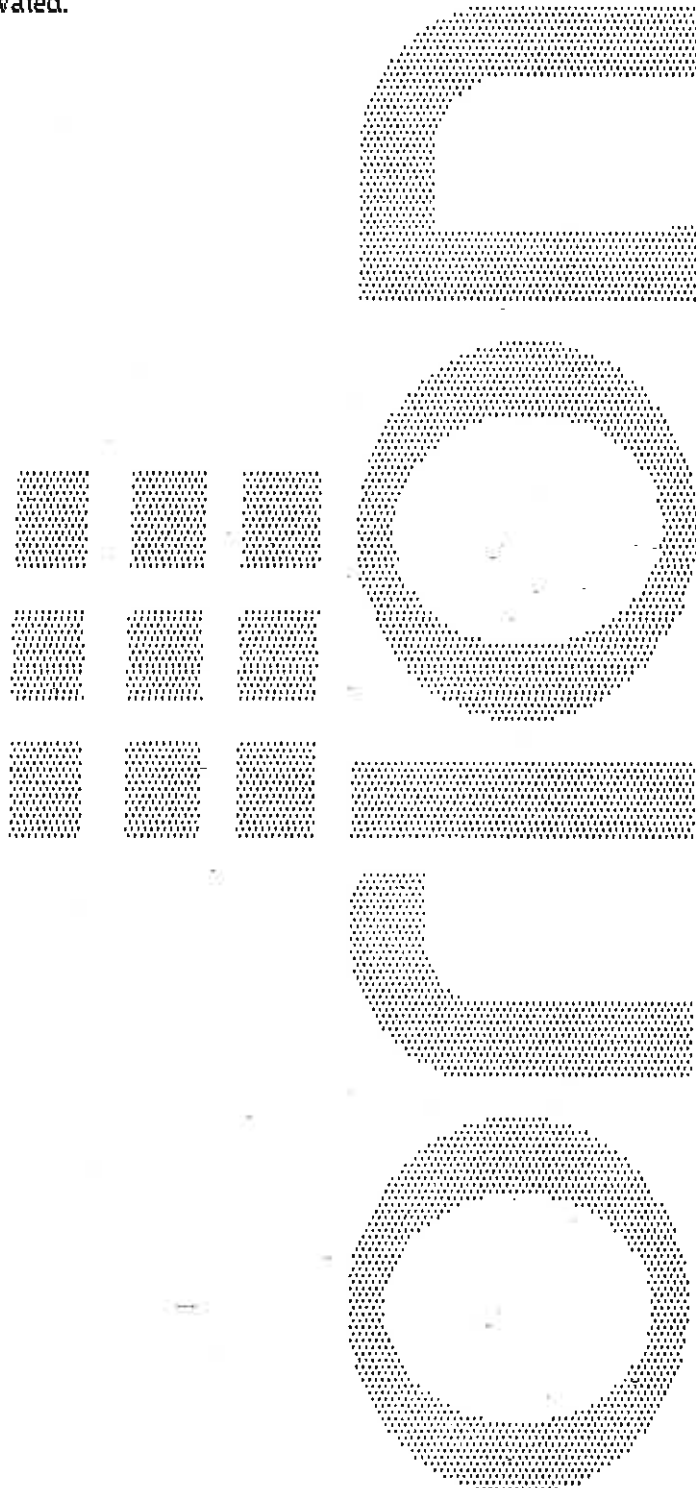

7. CYCLE CONTROLS

7.1 Film Tension

The film tension may be adjusted through the film tension control potentiometer. The pot has a range of tension from 0 to 10, 10 being the highest tension rating. This pot may be adjusted during the cycle.

CAUTION: Light loads may require lower tension settings than heavier loads.

The film tension is controlled through the dancer bar system. Occasionally the feedback potentiometer may need some adjustment. The adjustment of the feedback potentiometer can be performed while there is no film on the carriage. The bottom screw on the potentiometer coupling must first be loosened. Once the screw is loosened the potentiometer shaft must be turned until the prestretch motor just begins to hum but does not rotate, at which point the screw can be tightened. NOTE: the condition in which the motor hums but doesn't turn must be maintained even after the screw is tightened, if not the adjustment procedure must be repeated.

7.2 Carriage Speed


The carriage speed control can be used to control the amount of overlap the film will have on itself during a wrap.

The control potentiometer has settings from 0 to 10, the higher settings being the fastest. High settings will mean less film overlap because of faster carriage speed, and low settings will mean more film overlap because of lower carriage speeds.

7.3 Top And Bottom Wraps

There are two multi-position switches which control the number of wraps that may be put at the top and bottom of the load. Each switch has positions going from 1 to 10 corresponding to the number of wraps which may be applied at the top or bottom of the load.

These switches may be set before the cycle begins.

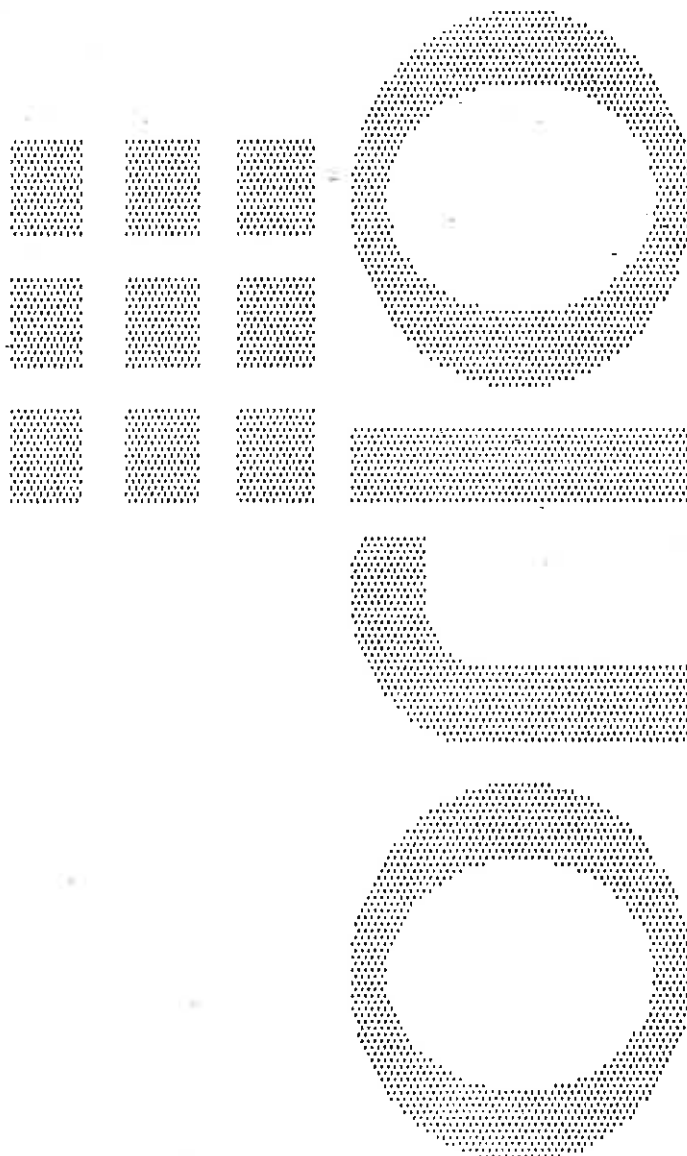

8. MACHINE MAINTENANCE

8.1 Speed Reducer Maintenance

On the reducing transmission, after the first week all external cap screws and plugs should be checked for tightness. It is recommended to change the oil every six months or every 2500 hours of operation, whichever comes first. When adding oil the transmission should never be filled above the oil level mark indicated because leakage and overheating may occur. Below is a list of the type of lubricant that should be used.

| Manufacturer | Lubricant |
|------------------------|-----------------------------|
| American Oil Co. | American Cyl. Oil No. 196-L |
| Cities Service Oil Co. | Citgo Cyl. Oil 180-5 |
| Gulf Oil Corp. | Gulf Senate 135 |
| Mobile Oil Corp. | Mobil 600 W Super Cyl. Oil |
| Phillips Oil Co. | Andes S 180 |
| Texaco Inc. | 624-650T Cyl. Oil |
| Shell Oil Co. | Velvata Oil J82 |
| Union Oil Of Cal. | Red Line Worm Gear Lube 140 |

Reducing transmissions are found on the carriage, and at the base of the tower.

8.2 Motor Maintenance

An occasional inspection of the brushes should be made in order to establish a wear rate. Replacement brushes should be installed before old brushes wear to 9/16" long, measured on the long side. After

replacing brushes run the motor near rated speed for at least 1/2 hour with no load to seat the new brushes. Failure to properly seat the new brushes may cause commutator damage and rapid wear of the new brushes. If the commutator becomes rough, scored, or out of round, a competent motor shop should disassemble the motor and resurface the commutator. With every third brush change, have a competent motor shop resurface the commutator and blow the carbon dust out of the motor.

8.3 Chain Maintenance

To clean and relubricate chains, wipe them with an oily cloth every month. If the environment is very dusty or damp, it may be necessary to clean and relubricate the chains more often.

With time the chains will tend to stretch. A loose elevator chain should be tightened at the chain tensioner as shown on drawing number 200-192. A loose turntable drive chain should be tightened by tightening the 1/2" dia. screw on the base, next to the turntable.

8.4 Cam Follower Maintenance

The cam followers behind the carriage have deep grease pockets and do not need frequent relubrication.

The portion of the tower on which the cam followers roll should be cleaned and regreased every 300 hours of operation. If the machine operates in a dusty or corrosive environment the tower should be relubricated more often.

The cam followers under the turntable are wet with oil in order to keep the track properly lubricated. The oil pockets should be refilled every 200 hours of operation. The two oil pockets are found on the base, underneath the table.


APPENDIX

ORION PACKAGING INC.

NOTICE

The manual covers standard features of the machine. Certain machine options may not be covered fully by this manual due to their unique application.


Orion
MULTISTRETCH

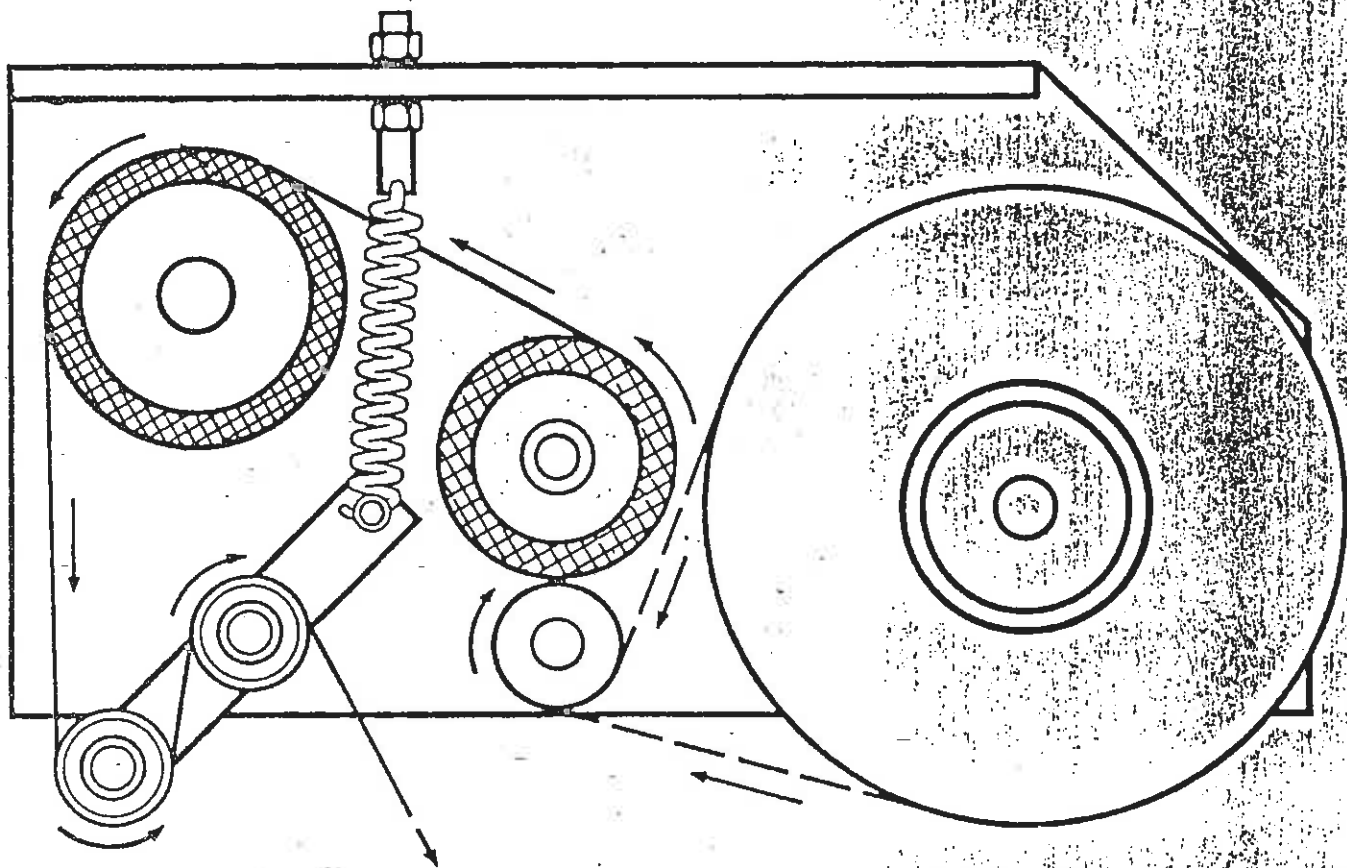

DISCONNECT POWER BEFORE FEEDING

Electrical Boards' Chart for ORION Stretchwrappers

| | 168-4 | 168-A | 236 | 336 | 750+ | 750M-240V | 850M | 850C | 155-3A |
|------------------|-------|-------|-----|-----|------|-----------|------|------|--------|
| MLH 44 Processor | X | | X | | X | | | | |
| MLH 44 | X | | X | | X | | | | X |
| MLH 55 | | X | | X | | | X | | X |
| MLH 66 | | X | | X | | | X | | X |
| MLH 77 | | X | | | | | | | X |
| PA 33 | X | | | X | X | | | | |
| FA 33 | X | | | X | | X | | X | |
| MA 33 | X | | | X | | X | | X | |
| MA 44 | X | | | X | X | | | X | |
| MA 55 | X | | | X | | | X | X | |

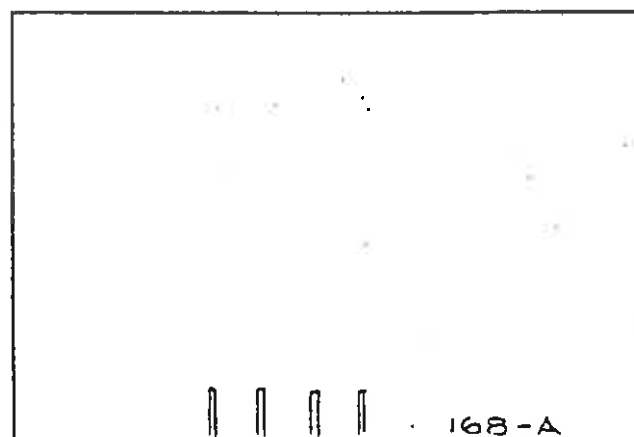

AC AC + -
120V DC

168-A

ORION PACKAGING INC

ECHELLE
SCALE: N.T.S.

APPROUVE PAR
APPROVED BY:

DESSINE PAR
DRAWN BY: VALENTIN


DATE: 16-9-87

REVISE PAR
REVISED BY:

168-A

NUMERO DE DESSIN
DRAWING NUMBER

200 391 A

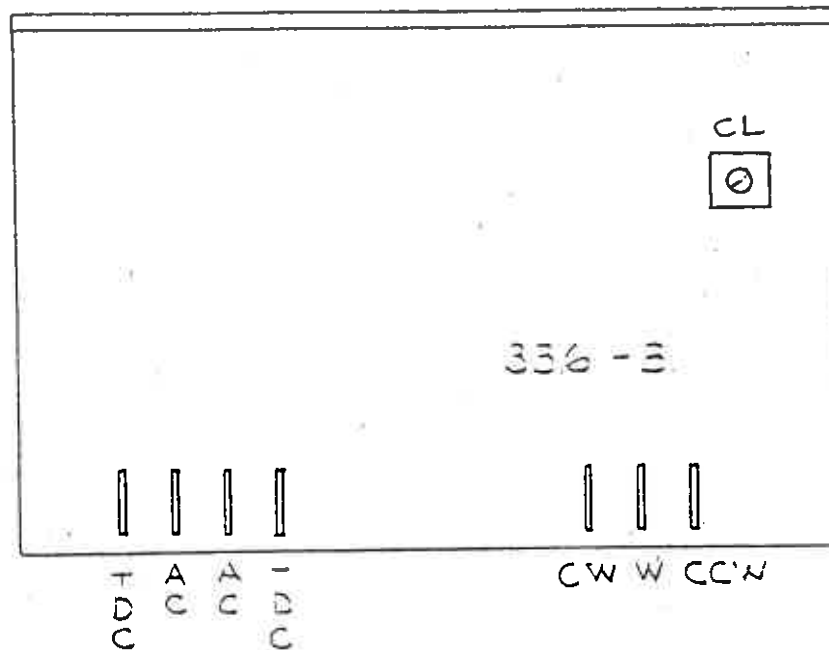

CL : CURRENT LIMITER

ORION PACKAGING INC.

ECHELLE:
SCALE: N.T.S.

APPROVE PAR:
APPROVED BY:



DESSINE PAR: VALENTINI
DRAWN BY:

DATE: 6-2-37

REVISE PAR:
REVISED BY:

336-B

NUMERO DE DESSIN
DRAWING NUMBER
200 830

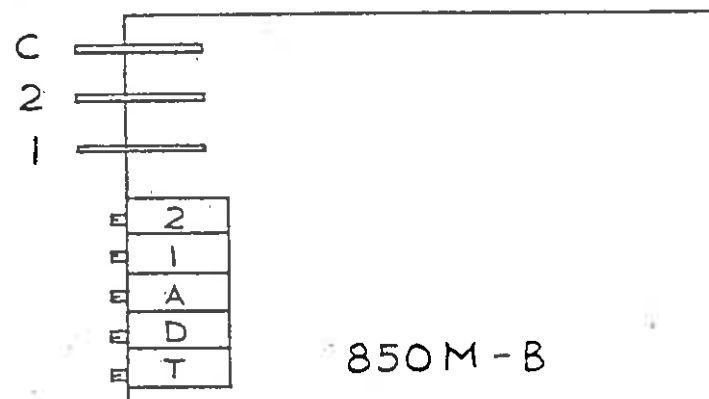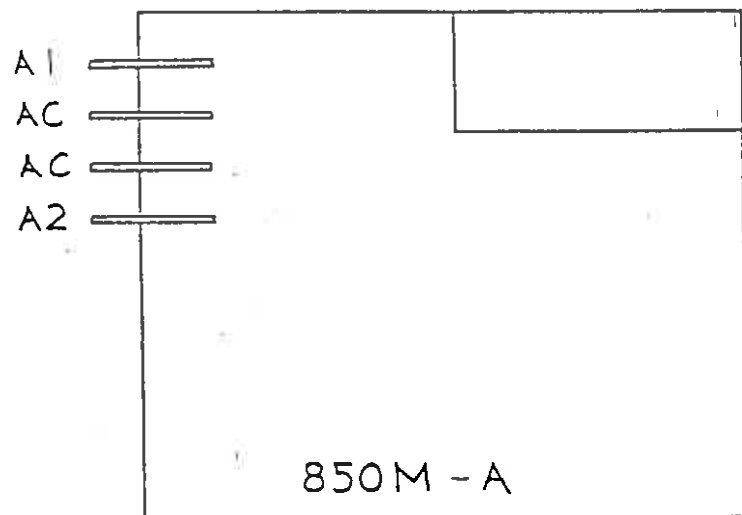

2: LOW SPEED ADJ.
 1: HIGH SPEED ADJ.
 A: ACCELERATION ADJ.
 D: DECELERATION ADJ.
 T: CURRENT LIM.

ORION PACKAGING INC.

ECHELLE: N.T.S.
 SCALE:

APPROUVE PAR:
 APPROVED BY:

DESSINE PAR: VALENTINI
 DRAWN BY:

DATE: 16-9-87


REVISE PAR:
 REVISED BY:

850 M

NUMERO DE DESSIN
 DRAWING NUMBER


200 889

CHAIN TENSION
ADJUSTMENT

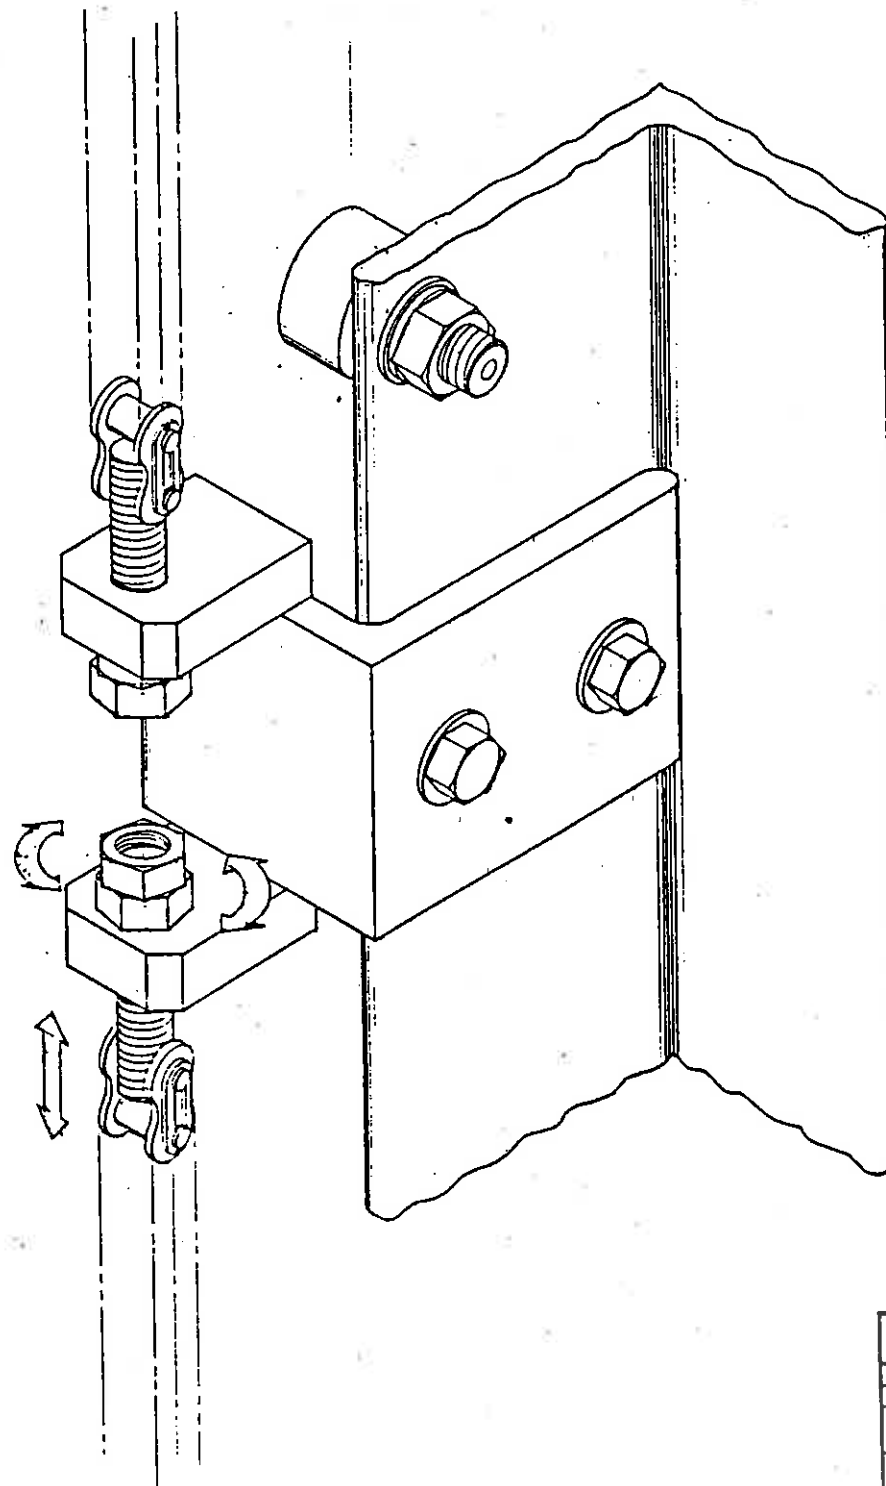


| | | |
|-----------------------|--------------|---------------------|
| ORION PACKAGING | | |
| DESIGN: N.T.S. | APPROVED BY: | DRAWN BY: VALENTINI |
| DATE: 2-7-86 | | REVISED |
| CHAIN TENSIONER ASS'Y | | |
| DRAWING NUMBER | | 200-192 |

TEFC P/M motor

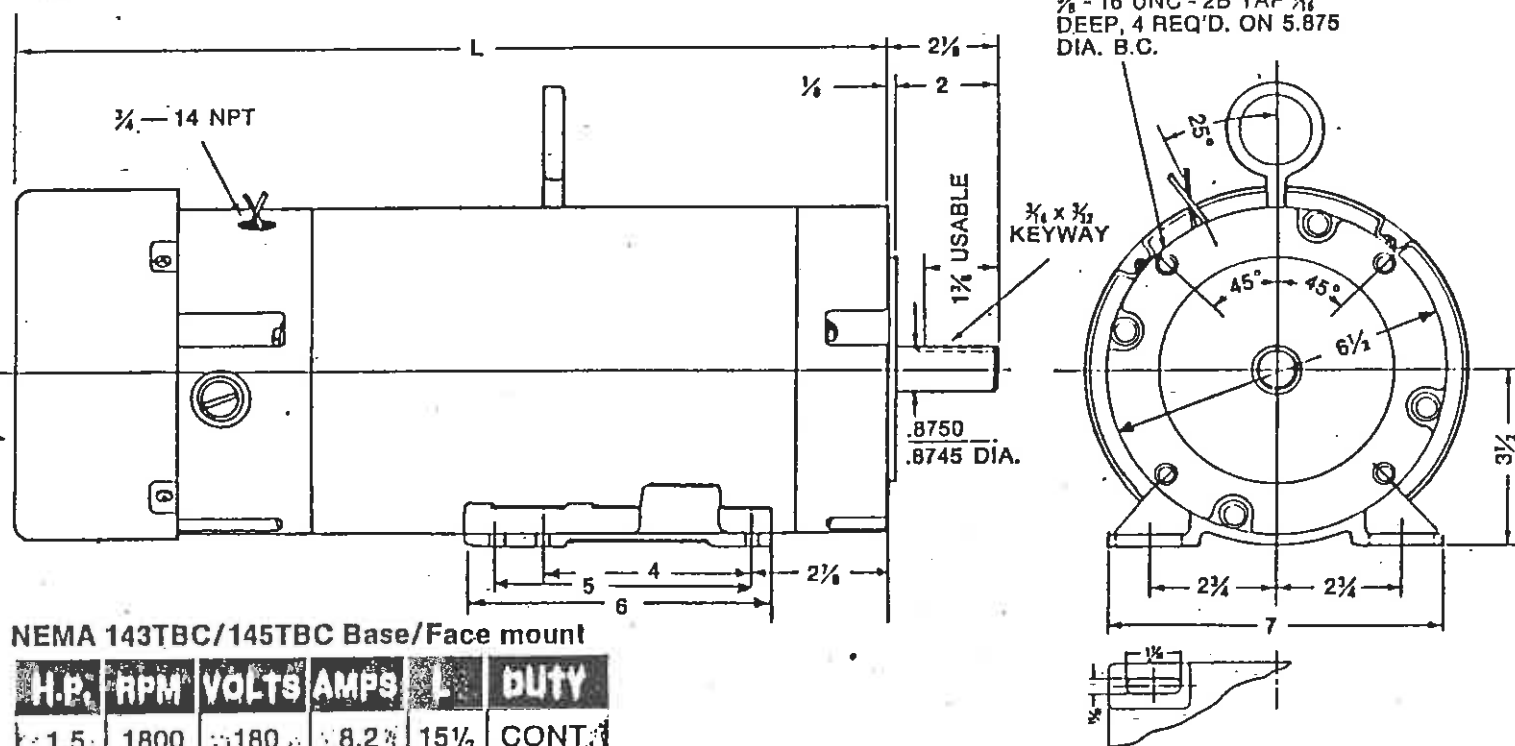

NEMA 143TBC/145TBC Base/Face mount

| H.P. | RPM | VOLTS | AMPS | L | DUTY |
|------|------|-------|------|-----|-------|
| 1.5 | 1800 | 180 | 8.2 | 15½ | CONT. |
| 2 | 1800 | 180 | 11.6 | 16½ | CONT. |

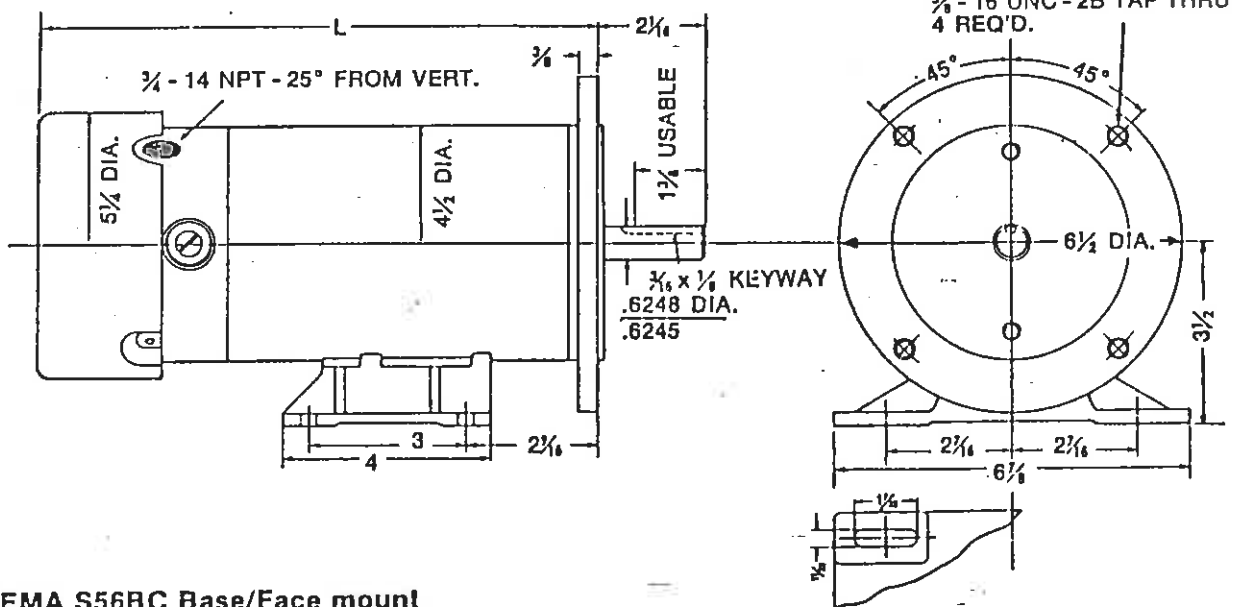

NEMA S56BC Base/Face mount

180 V.

| H.P. | RPM | VOLTS | AMPS | EFF. | BHP |
|------|------|-------|------|--------|-------|
| 1/2 | 1725 | 180 | 2.8 | 10 3/4 | CONT. |
| 3/4 | 1725 | 180 | 3.5 | 12 3/4 | CONT. |
| 1 | 1725 | 180 | 5.35 | 14 3/4 | CONT. |

90 v.


| H.P. | RPM | VOLTS | AMPS | L | BUTY |
|------|------|-------|------|-----|-------|
| 1/2 | 1725 | 90 | 5.35 | 10% | CONT. |
| 3/4 | 1725 | 90 | 8.1 | 12% | CONT. |
| 1 | 1725 | 90 | 10.6 | 14% | CONT. |

Lubrication

REDUCERS MAY BE FILLED TO THE PROPER LEVEL AT THE FACTORY WITH AGMA No. 8 compounded oil. AFTER INSTALLATION OF THE BREATHER PLUG, UNIT IS READY FOR USE. Before installing breather plug, refer to instruction tag and determine proper position according to reducer mounting.

We recommend an initial oil change after 250 hours of operation, then every six months or every 2500 hours of service under Class I Service. If fluctuating temperatures, humid, dirty or corrosive environment, oil changes should be made more frequently. Frequency can be established by oil sample analysis.

KEEP YOUR OIL CLEAN

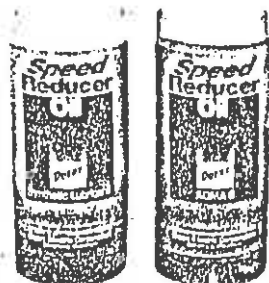

Doerr Electric replacement oil

To order oil, request:

Doerr part no. 00019001 — synthetic AGMA #7EP
(-40°F to 150°F)

Doerr part no. 00019101 — AGMA #8 (50°F to 125°F)

Oil is packed 12 one quart bottles per carton, minimum ship one carton.


Contact DEC Service Dept. for order information.

OIL CAPACITIES*

| UNIT TYPE | UNIT SERIES | | | | |
|-----------------|-------------|-----|-----|-----|-----|
| | 133 | 175 | 200 | 262 | 340 |
| Worm Over | 14 | 20 | 27 | 49 | 84 |
| Worm Under | 17 | 22 | 28 | 49 | 73 |
| Vertical Output | 10 | 15 | 20 | 37 | 63 |
| "J" Mount | 13 | 18 | 23 | 38 | 63 |

*Capacities in approximate ounces. On double reduction units determine capacity of both primary and secondary reducers.

OIL LEVELS*

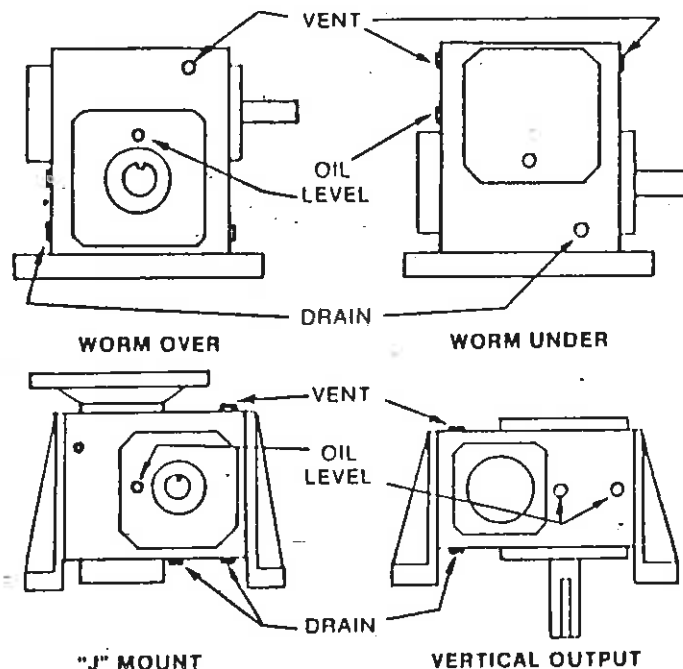

*On double reduction units fill and vent each unit to levels shown.



MAINTENANCE INSTRUCTIONS

STANDARD REDUCERS SERIES 133, 175, 206, 262, 325

INDEX

| | Page |
|---|------------|
| Introduction | 1 |
| Equipment Required | 1 |
| General Instructions | 1 |
| Housings | 1 |
| Seals | 1 |
| To Change Output Shaft Direction | 1 |
| Unit Disassembly, Parts Service, and Reassembly | 1 |
| Disassembly | 1 |
| Low Speed Shaft Removal | 1 |
| High Speed Shaft Removal | 1, 2 |
| Parts Service | 2 |
| Housing | 2 |
| Seal Cages and End Cover | 2 |
| Air Vent | 2 |
| Seals | 2, 3 |
| Bearings | 3 |
| Worm Gear and Shaft | 3 |
| Unit Reassembly | 4 |
| High Speed Shaft Assembly | 4 |
| Low Speed Shaft Assembly | 4 |
| Preventive Maintenance | 6 |
| Stored and Inactive Units | 6 |
| Parts Ordering Instructions | 6 |
| Exploded Views | 7, 8, 9 |
| Parts List | 9 |
| Warranty | Back Cover |

MAINTENANCE INSTRUCTIONS FOR STANDARD REDUCERS

Series 133, 175, 206, 262 and 325

INTRODUCTION

The following instructions apply to standard Worm Gear Reducers. When ordering parts or requesting information specify all information stamped on the reducer nameplate. The nameplate will also identify the type of lubricant to be used.

EQUIPMENT REQUIRED

In addition to standard mechanic's tools, the following equipment is required: arbor press, wheel puller, torque wrench, dial indicator, seal driver, bluing, Permatex No. 2 and Permatex No. 3, snap ring pliers for internal and external rings.

GENERAL INSTRUCTIONS

Housings — Clean external surfaces of reducer before removing seal cages and end covers to prevent dirt from falling into the unit. Record mounting dimensions of accessories for reference when reassembling. If it is necessary to remove the reducer from its operating area, disconnect all connected equipment and lift reducer from its foundation.

Seals — Replacement of all seals is recommended when a unit is disassembled. However, if seals are not to be replaced, protect seal life by wrapping shaft with thin, strong paper coated with oil or grease before removing or replacing seal case assembly. Clean the shaft but do not use any abrasive material on the shaft surface polished by the seal.

CAUTION

If the reducer is painted, extreme care should be taken to mask the shaft extensions and rubber surface of the seals. Paint on the shaft adjacent to the seal or on the seal lip will cause oil leakage.

TO CHANGE OUTPUT SHAFT DIRECTION

To change the hand of a unit from left hand to right hand, or vice versa, the following instructions apply:

1. Remove drain plug and drain oil from unit.
2. Remove end cover and seal cage cap screws; then while supporting output shaft remove end cover and shims from the unit.
3. Remove output shaft and seal cage together from extension side.

NOTE: Keep shims with their respective seal cage and end cover.

4. Insert seal cage, shims and sub-assembly into the housing from the side opposite from which they were removed. Insert seal cage cap screws and tighten with light pressure.
5. Assemble end cover and shims. Insert end cover cap screws and tighten with light pressure.
6. Turn high speed shaft in both directions to see that gear train is running freely.
7. Cross tighten seal cage and end cover cap screws to torques listed in Table 1.

TABLE 1. CAPSCREW TIGHTENING TORQUE

| Capscrew Diameter | 1/4 - 20 UNC | 5/16 - 18 UNC | 3/8 - 16 UNC |
|-----------------------|--------------|---------------|--------------|
| Torque (in. lbs.) Dry | 96 | 204 | 360 |

UNIT DISASSEMBLY, PARTS SERVICE, AND ASSEMBLY

Disassembly:

1. Remove drain plug and drain oil from unit.
2. Low speed shaft (gear shaft) removal:
 - A. Remove end cover and seal cage cap screws.
 - B. With a firm hold on the output extension remove end cover and shims.
 - C. Carefully slide output shaft assembly and seal cage out extension side.
 - D. Slide seal cage off low speed shaft using caution to prevent damage to seal lips.
 - E. Wire or tie the shims to their mating end cover and seal cages. They will be available for reference when assembling the unit.
3. High speed shaft (worm shaft) removal:
 - A. Position unit with input shaft down. With a small chisel make a groove in the stamped steel cover opposite the shaft extension. Pry cover off.

- B. Remove internal snap ring from housing bore.
- C. Reposition the housing with the worm shaft horizontal. Using a plastic hammer gently tap on the end of the shaft extension to feed worm shaft assembly through housing and out.

Parts Service:


1. **Housing** — Clean inside of housing with kerosene or solvent and then dry.
2. **Seal cages and end cover** — Remove dirt from joint faces, wipe clean and dry.
3. **Air vent** — Wash in kerosene, blow clean and dry.
4. **Seals** — To replace seals without dismantling reducer refer to steps C through F below. To replace seals when the entire reducer is dismantled and coupling hubs, sprockets, pulleys, pinions, keys, etc. have been removed the following instructions apply:

NOTE: Replacement of all seals is recommended when a unit is disassembled.

Caution

New seals will leak if the seal lips or if seal's rubbing surface on the shaft has been altered. Protect seal lips at all times. Clean the shaft but do not use any abrasive material on the shaft surface polished by the seal.

- A. Block up seal cages and press or drive out seal.
- B. Remove old sealing compound from seal seat in cage if it is present. If a seal with rubber coating on the outside diameter is used, no Permatex is necessary. If no rubber coating is on seal outside diameter, coat seal cage bore with Permatex No. 3 or equivalent immediately before assembly. To prevent possible damage to seal lips, do not reassemble seals until high speed and low speed shafts have been reassembled to the housing. Then see steps E and F below.
- C. See Figures 1 through 4—To replace seals without dismantling reducer, proceed as follows:

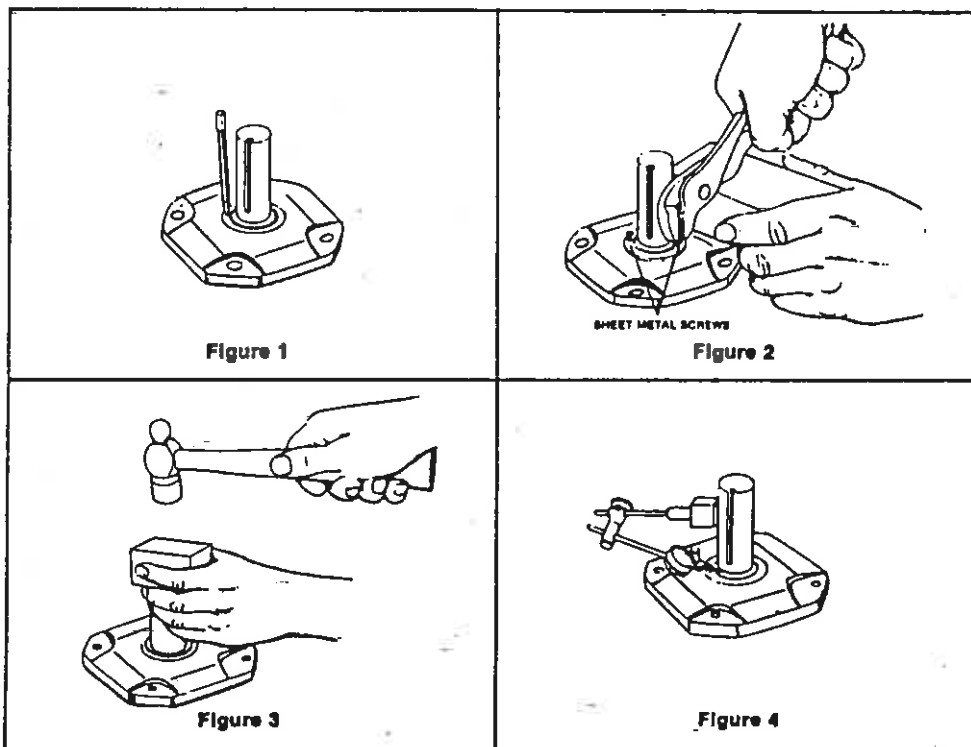

Caution

Do not damage shaft; new seals will leak if seal contacting surface is marred. Use punch and place two or more holes in steel casing of seal, Figure 1. (The steel casing may be rubber coated) Insert sheet metal screws, leaving the heads sufficiently exposed so they can be pried up or grasped with pliers, Figure 2. Do not drill holes because chips may get into the unit.

- D. Work seal loose. Be careful to keep all metal or dirt particles from entering unit. Remove old sealing compound from seal seat if it is present. Also remove burrs and sharp edges from shaft. Clean with rag moistened with solvent. Do not use abrasive material on shaft seal contacting surface.

Caution

- E. Protect seal lips when handling; seal leakage will result if these are damaged. If a seal with rubber coating on the outside diameter (O.D.) is used, no Permatex is necessary. If no rubber coating is on seal O.D., coat seal cage bore with Permatex No. 3 or equivalent. Coat seal lips with oil and carefully work seal into position. Before sliding seal into position, protect seal lips from shaft keyway edges by wrapping shaft with thin, strong paper coated with oil. Position garter spring toward the inside of the unit. Place a square faced pipe or tube against the seal O.D. and drive or press seal until fully seated as shown in Figure 3. Do not strike seal directly.

- F. For best performance, seat the seal square with shaft within .005" at 180°. Check with dial indicator as shown in Figure 4, Page 2, or with a straight edge and feelers, or square and feelers. To straighten a cocked seal, place tubing over the seal and tap the tube lightly at a point diametrically opposite the low point on the seal. DO NOT strike seal directly.

5. Bearings —

- A. Wash all bearings in clean kerosene and then dry.
B. Inspect bearings carefully and replace those that are worn or questionable.
NOTE: Replacement of all bearings is recommended.
C. Use a wheel puller or press to remove worm shaft bearings. Apply force to inner race only — not to cage or outer race.
D. Use a wheel puller or press to remove output bearing inner races.
E. New seal cages and end covers must be used when replacing output bearings. Output bearing outer races must be pressed in square and seated completely.
F. To replace output bearing inner races and all input bearings, heat bearings in an oil bath or oven to maximum of 290 degrees F (143 degrees C). Slide high speed shaft bearings onto the oiled shaft until seated against the shoulder or snap ring of the shaft. Slide low speed shaft bearings onto the oiled shaft against the gear spacer.
G. Thoroughly coat all bearings with lubricating oil.

6. Worm, gear and shafts

- A. Worm and high speed shaft—since all worms are integral with the high speed shaft, any wear or damage to the worm will necessitate replacing both.
B. Press shaft out of bronze worm gear. To reassemble gear and low speed shaft, freeze shaft or heat gear. Do not exceed 200 degrees F (93 degrees C). Insert key into shaft keyway and press shaft into oiled gear bore. The short hub of the gear must be assembled toward snap ring on the shaft.
NOTE: It is advisable to replace both the worm and worm gear should either of the assemblies require replacement.

Unit Reassembly:

1. Preliminary

- A. Check to see that all worn parts have been replaced, gear and bearings coated with oil and all parts cleaned. Remove all foreign matter from unit feet. The feet must be flat and square with each other.
- B. Before starting to reassemble reducer, add old shims or replace with new shims of equal thickness.

2. High Speed Shaft (Worm Shaft) Assembly

- A. Lubricate bearing bores of housing and insert high speed shaft sub-assembly from opposite extension end into housing until seated against shoulder in bore. Tap the end of the shaft lightly with a plastic hammer to feed bearings through bores.
- B. Lock high speed sub-assembly in housing bore with lock ring.
- C. Coat outside diameter of stamped steel end cover with Permatex No. 2 and press into high speed bore opposite extension end until flush with housing. If steel endcover is rubber coated then no Permatex is necessary.

3. Low Speed Shaft (Gear Shaft) Assembly

- A. Determine output shaft direction.
- B. Assemble low speed shaft assembly, seal cage, and end cover with shims on both seal cage and end cover. Torque cap screws to torques listed in Table 1. Rotate the input shaft to seat output bearings.
- C. Moving the shaft back and forth by hand, check axial float with dial indicator as shown in Figure 5. Axial float must be .0005-.003 with .0005 being the absolute minimum. Do not preload bearings. If the axial float is not as specified add or subtract required shims under end cover.

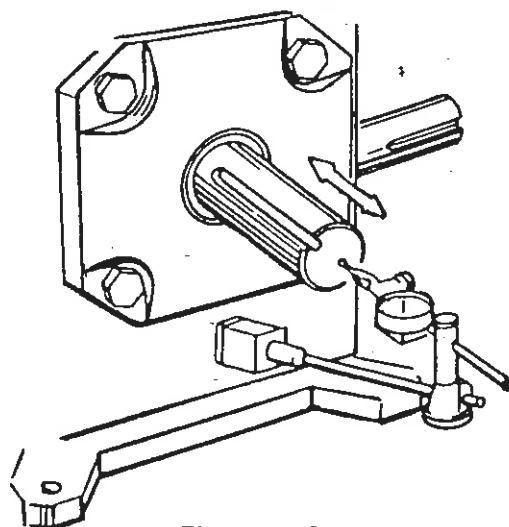


Figure 5 Checking Axial Float

- D. Remove output shaft with seal cage and apply bluing to entire worm thread. Worm thread must be clean of oil. Reassemble output shaft and seal cage with output key facing up.
- E. Use a rag to apply hand pressure to the output shaft and rotate the high speed shaft until output key is down. Return output shaft to original position by reversing rotation. Remove output shaft and seal cage to inspect contact. Compare with Figure 6. If contact is not correct move assembly in the direction shown in Figure 6 by adding shims to the side to which the arrow points after removing them from the opposite side. Repeat steps D and E until contact pattern is correct.
- F. Recheck axial float with dial indicator.
- G. When contact pattern is correct tighten seal cage and end cover cap screws to torques listed in Table 1 page 1.

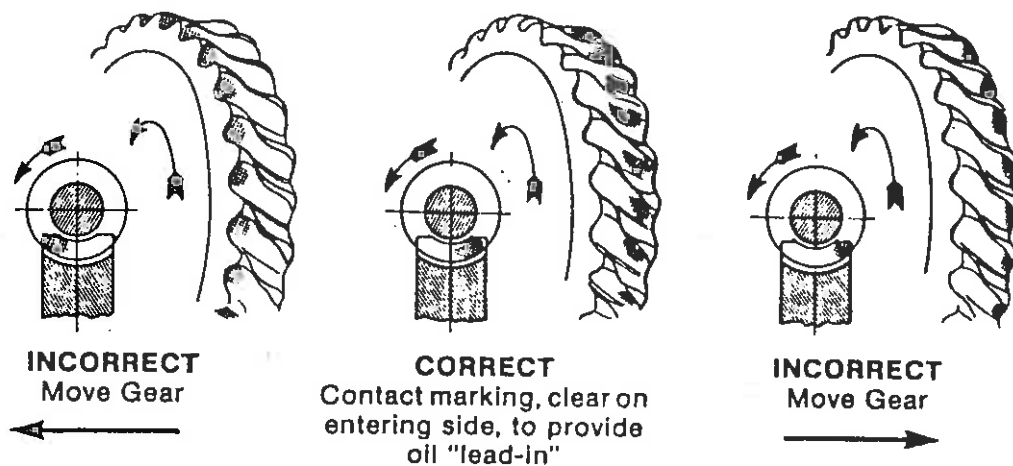


Figure 6 Gear Contact Pattern

4. **Seals** — To reassemble seals to unit, see Parts Service Steps 4E and 4F, page 3.

5. **Motorized Coupling Adapter**

Certain mounting dimensions should be adhered to when removing motor and coupling assembly for service. When ordering replacement coupling halves (metal gear), specify correct bore diameter. See Table 2 for mounting dimensions and available bore sizes.

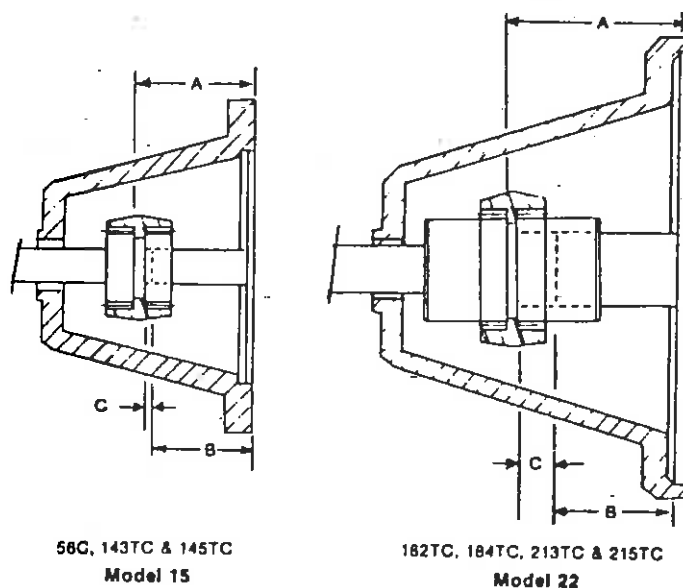


Figure 7 Motorized Coupling Adaptor

TABLE 2. COUPLING ADAPTOR DATA

"C" COUPLING MOUNTING DATA

| N.E.M.A. Frame No. | Mounting Dimensions | | |
|-----------------------|---------------------------------|-------------------------------|----------------|
| | Reducer A $\pm \frac{1}{64}$ | Motor B $\pm \frac{1}{64}$ | C |
| 56C | $2\frac{5}{16}$ | $2\frac{1}{8}$ | $\frac{1}{16}$ |
| 143TC | $2\frac{5}{16}$ | $2\frac{1}{8}$ | — |
| 145TC | $2\frac{5}{16}$ | $2\frac{1}{8}$ | — |
| 182TC | $3\frac{5}{16}$ | $2\frac{5}{8}$ | $\frac{1}{2}$ |
| 184TC | $3\frac{5}{16}$ | $2\frac{5}{8}$ | $\frac{1}{2}$ |
| 213TC | $3\frac{5}{16}$ | $3\frac{1}{8}$ | — |
| 215TC | $3\frac{5}{16}$ | $3\frac{1}{8}$ | — |

BORE SIZES AVAILABLE

| MODEL 15 | | MODEL 22 | |
|----------|------------------------------------|----------|------------------------------------|
| Bore | Kwy. | Bore | Kwy. |
| .500 | None | — | — |
| .500 | $\frac{1}{8} \times \frac{1}{16}$ | — | — |
| .625 | $\frac{3}{16} \times \frac{3}{32}$ | .625 | $\frac{3}{16} \times \frac{3}{32}$ |
| .750 | $\frac{3}{16} \times \frac{3}{32}$ | .750 | $\frac{3}{16} \times \frac{3}{32}$ |
| .875 | $\frac{3}{16} \times \frac{3}{32}$ | .875 | $\frac{3}{16} \times \frac{3}{32}$ |
| — | — | 1.125 | $\frac{1}{4} \times \frac{1}{8}$ |
| — | — | 1.375 | $\frac{5}{16} \times \frac{5}{32}$ |

6. Final Inspection

- A. Turn gear train over by hand as a final check.
- B. Re-install reducer and accessories.

CAUTION: Discard motor key. Use only special key provided with reducer. Failure to use special key will make assembly impossible.

- C. Fill reducer with the recommended oil to proper level. See Fig. 8 for standard oil levels. (Type of oil recommended — see nameplate).
- D. Spin test for three minutes and check for noise, leakage, and rapid temperature rise.

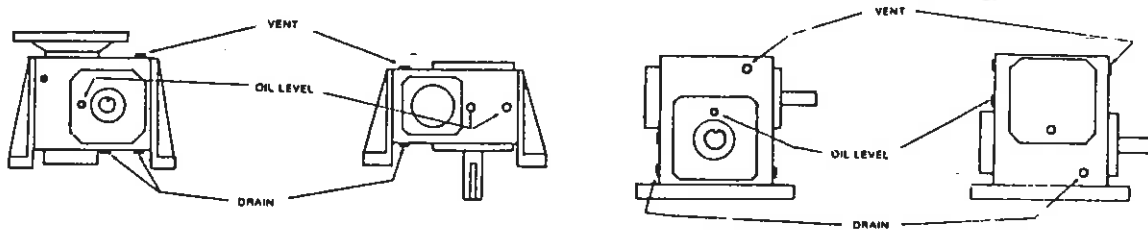


Figure 8 Standard Oil Levels

PREVENTATIVE MAINTENANCE

- A. After first week check all external cap screws and plugs for tightness.
- B. Periodically, check oil level when gears are at rest. Add oil if needed. Do not fill above mark indicated by level because leakage and overheating may occur.
- C. Oil changes — For normal operating conditions, change oil every six months or 2500 hours, whichever occurs first. Also if the unit is operated in an area where temperatures vary with the season, change the oil viscosity to suit the temperature. Most lubricant suppliers can test oil periodically and recommend economical oil change schedules.

CAUTION

See nameplate for type of lubricant to be used.

STORED AND INACTIVE UNITS

- 1. Each unit is shipped with oil that will protect parts against rust for a period of 4 months in an outdoor shelter or 12 months in a dry building after shipment from the factory. Indoor dry storage is recommended.
- 2. If a unit is to be stored or is to be inactive after installation beyond the above periods, fill the unit completely with oil.

CAUTION

Before starting a stored unit or re-starting an inactive unit, the oil level should be returned to the proper value as indicated by the oil level.


PARTS ORDERING INSTRUCTIONS

When ordering replacement parts first locate the exploded view that corresponds to your Doerr Electric gear reducer. Then determine which parts must be ordered. To order the parts, please provide the following:


- 1. Complete Model Number (Nameplate)
- 2. Item Number (Exploded view and parts list)
- 3. Part Description (Parts list)

Note that one parts list covers all five exploded views. Although a single Item number may refer to the same part on all five exploded views, it is incorrect to assume that these parts are interchangeable. They are not. Therefore, it is imperative that items 1 through 3 above be provided when ordering your parts.


Failure to provide this information will only slow or prevent the processing of your order.

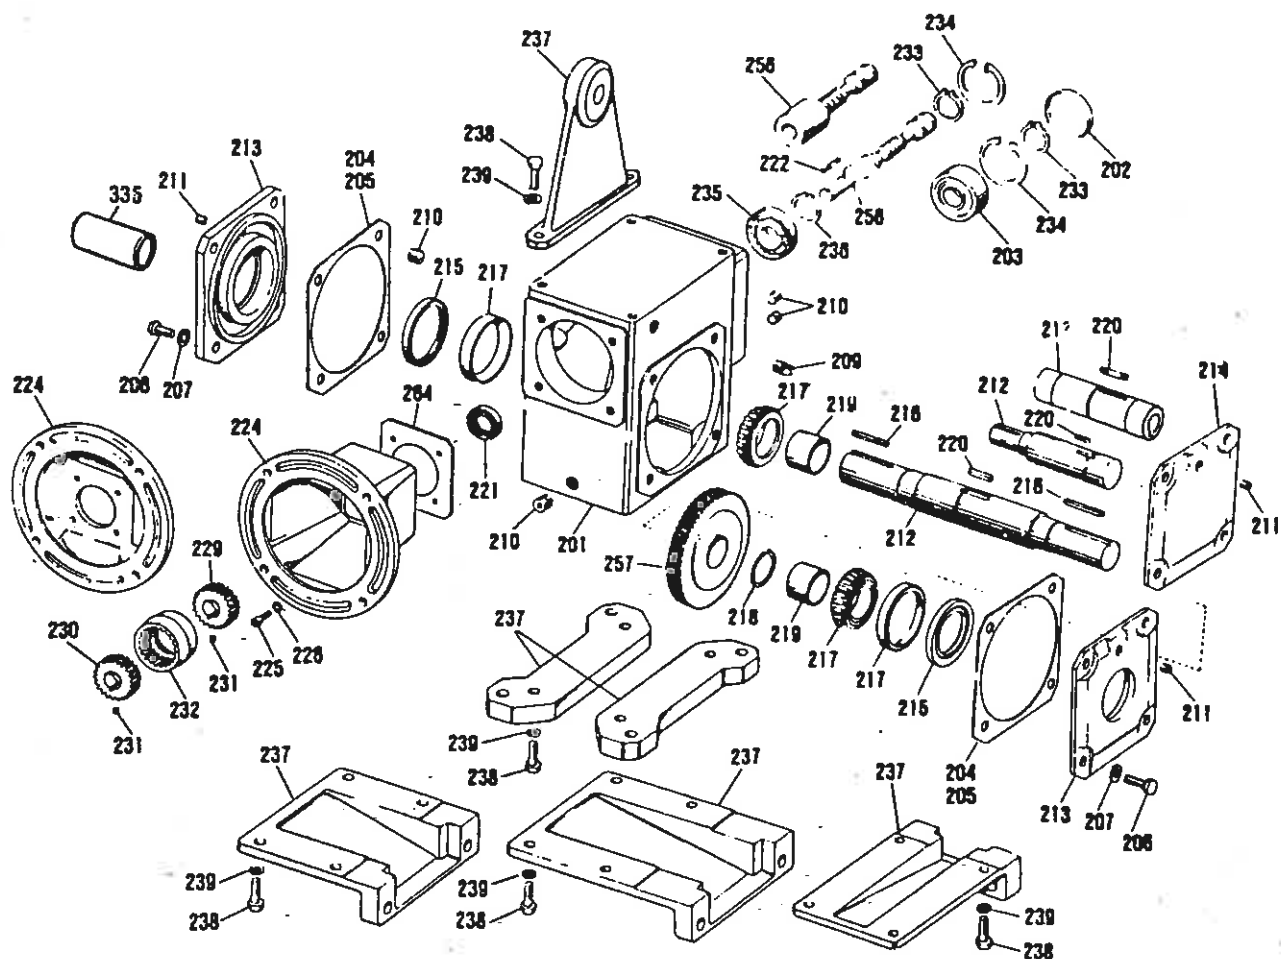


Single Reduction Unit 133, 175, 206 Series

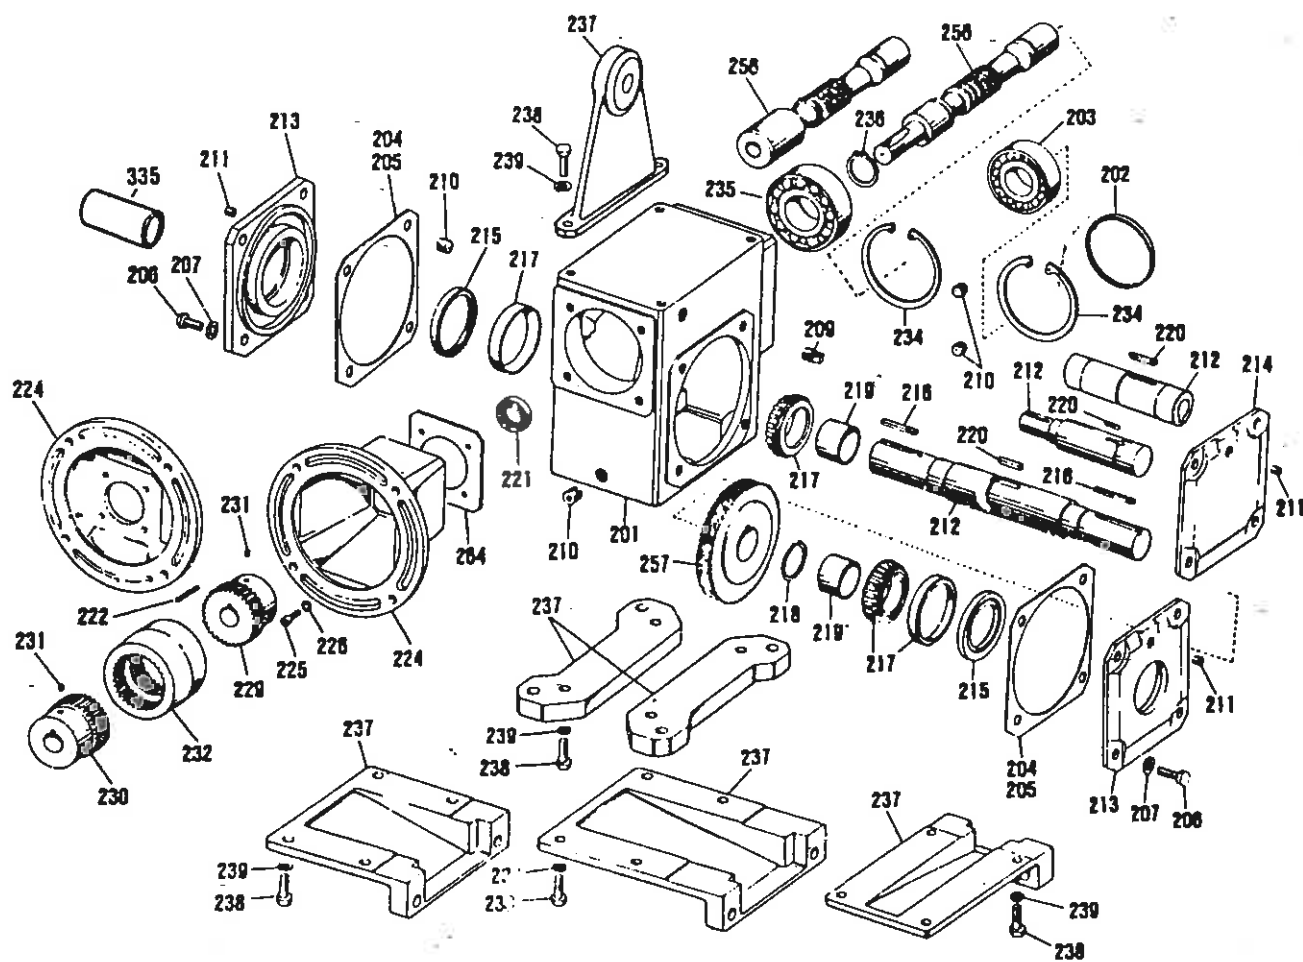


Single Reduction Unit 262, 325 Series

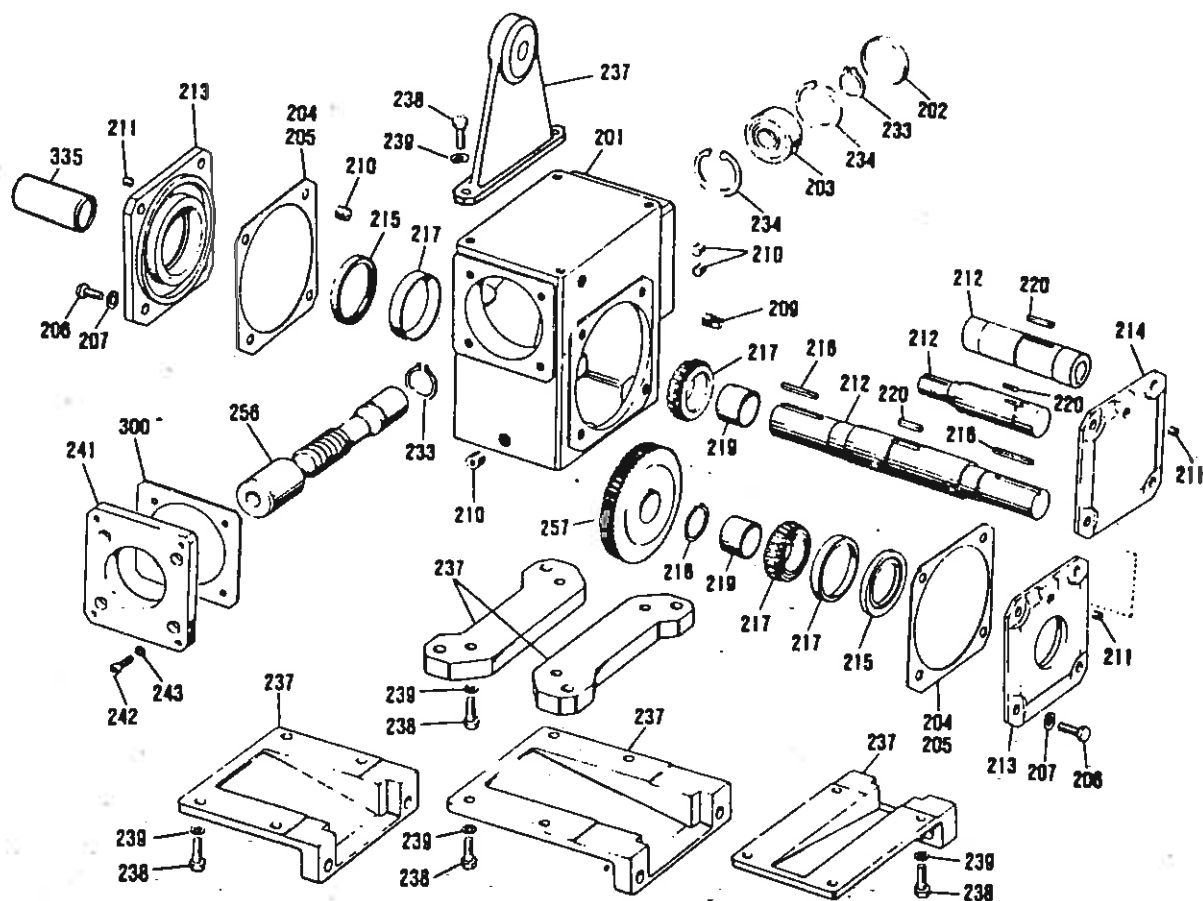

Double Reduction Secondary Unit 133, 175, 206 Series

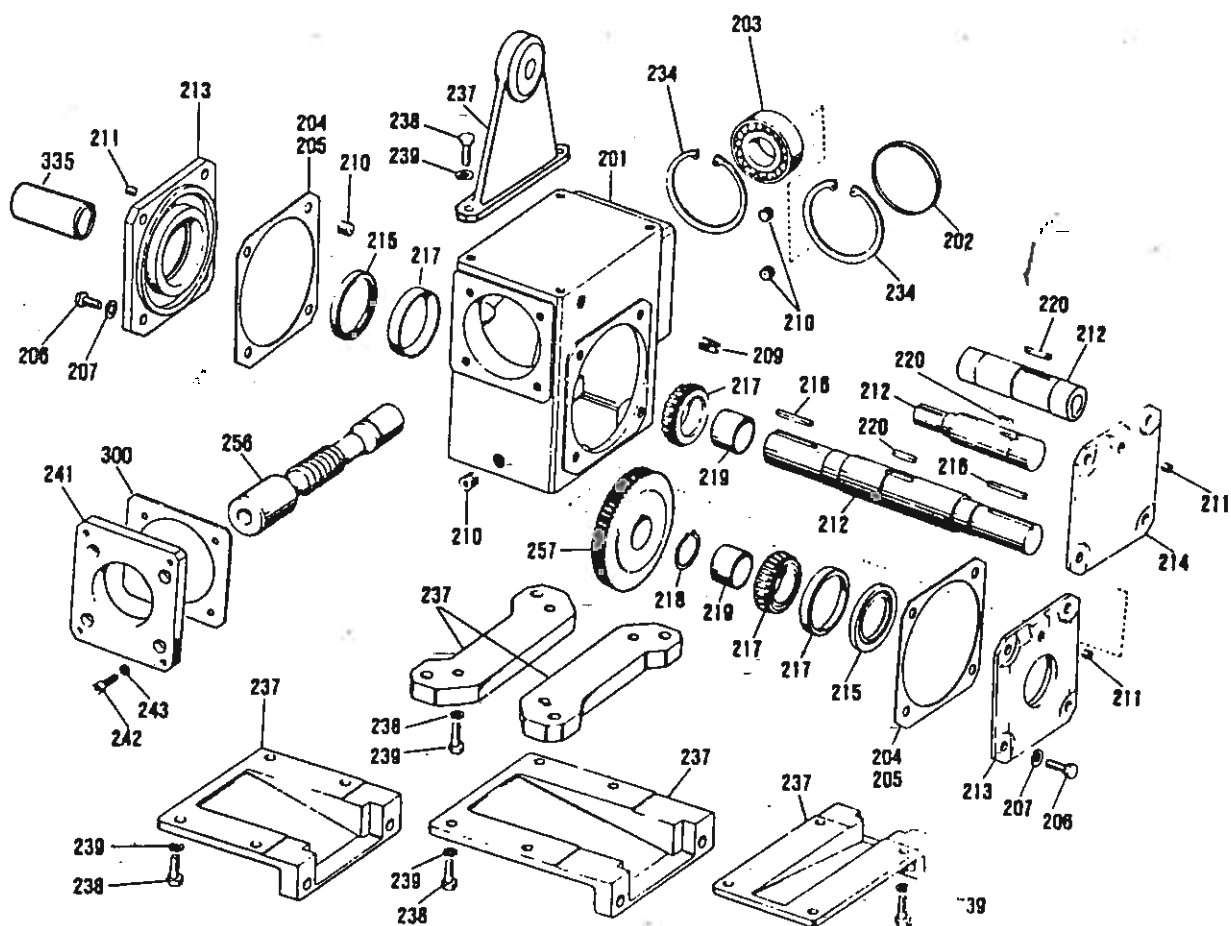

Double Reduction Secondary Unit 262, 325 Series

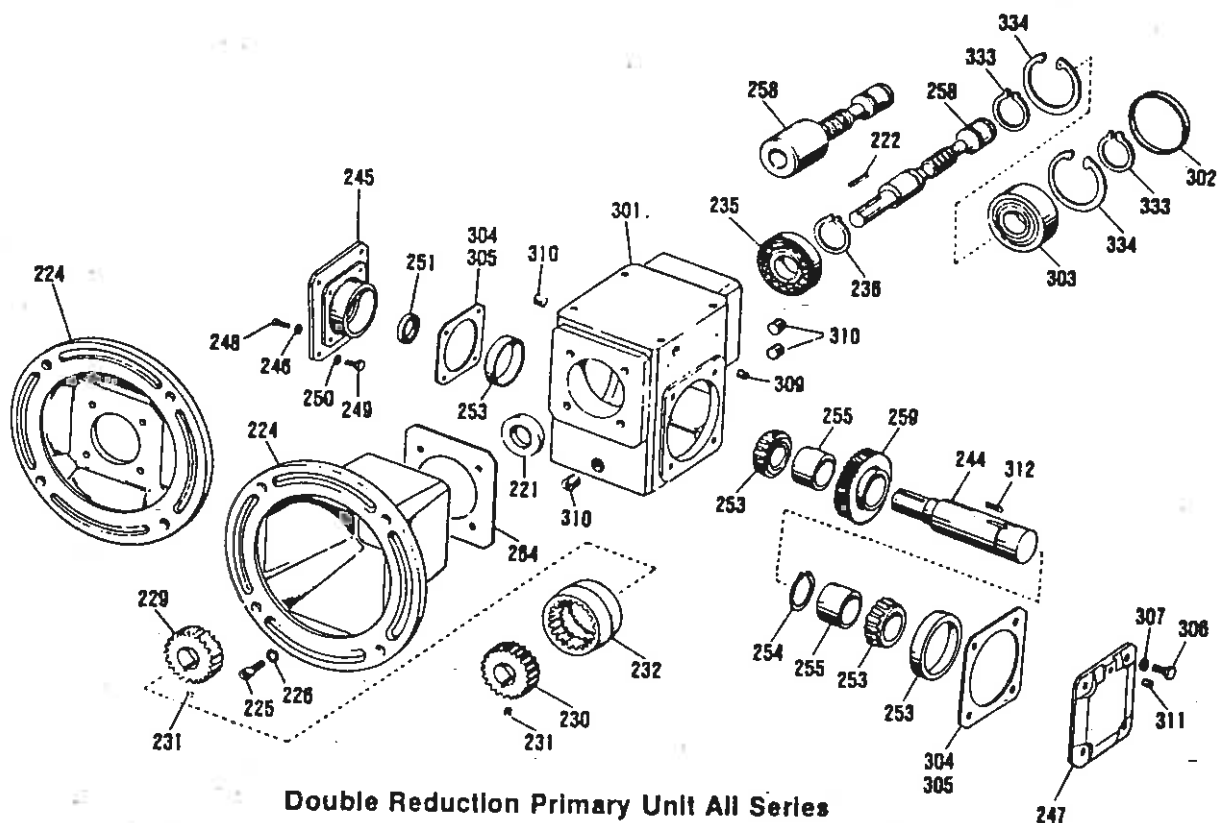


Double Reduction Primary Unit All Series




PARTS LIST
(Applies to all exploded views)


| ITEM | DESCRIPTION | ITEM | DESCRIPTION | ITEM | DESCRIPTION |
|------|-------------------|------|----------------------|------|-------------------|
| 201 | Housing | 229 | Coupling Hub (Unit) | 255 | Spacer |
| 202 | End Cover | 230 | Coupling Hub (Motor) | 256 | Worm |
| 203 | Bearing | 231 | Setscrew | 257 | Gear |
| 204 | Shim (.019 Thick) | 232 | Coupling Sleeve | 258 | Worm |
| 205 | Shim (.007 Thick) | 233 | Lock Ring | 259 | Gear |
| 206 | Capscrew | 234 | Lock Ring | 260 | Thrust Plate |
| 207 | Lock Washer | 235 | Bearing | 261 | Capscrew |
| 209 | Vent Plug | 236 | Lock Ring | 264 | Gasket |
| 210 | Pipe Plug | 237 | Base | 300 | Gasket |
| 211 | Pipe Plug | 238 | Capscrew | 301 | Housing |
| 212 | Output Shaft | 239 | Lock Washer | 302 | End Cover |
| 213 | Seal Cage | 241 | Secondary Adaptor | 303 | Bearing |
| 214 | End Cover | 242 | Capscrew | 304 | Shim (.019 Thick) |
| 215 | Oil Seal | 243 | Lock Washer | 305 | Shim (.007 Thick) |
| 216 | Key | 244 | Primary Output Shaft | 306 | Capscrew |
| 217 | Bearing | 245 | Primary Adaptor | 307 | Lock Washer |
| 218 | Lock Ring | 246 | Lock Washer | 309 | Vent Plug |
| 219 | Spacer | 247 | End Cover | 310 | Pipe Plug |
| 220 | Key | 248 | Capscrew | 311 | Pipe Plug |
| 221 | Oil Seal | 249 | Capscrew | 312 | Key |
| 222 | Key | 250 | Lock Washer | 333 | Lock Ring |
| 224 | Motor Flange | 251 | Oil Seal | 334 | Lock Ring |
| 225 | Capscrew | 253 | Bearing | 335 | Shaft Cover |
| 226 | Lock Washer | 254 | Lock Ring | | |

Note: When ordering replacement parts, specify model number, item number, and part description.

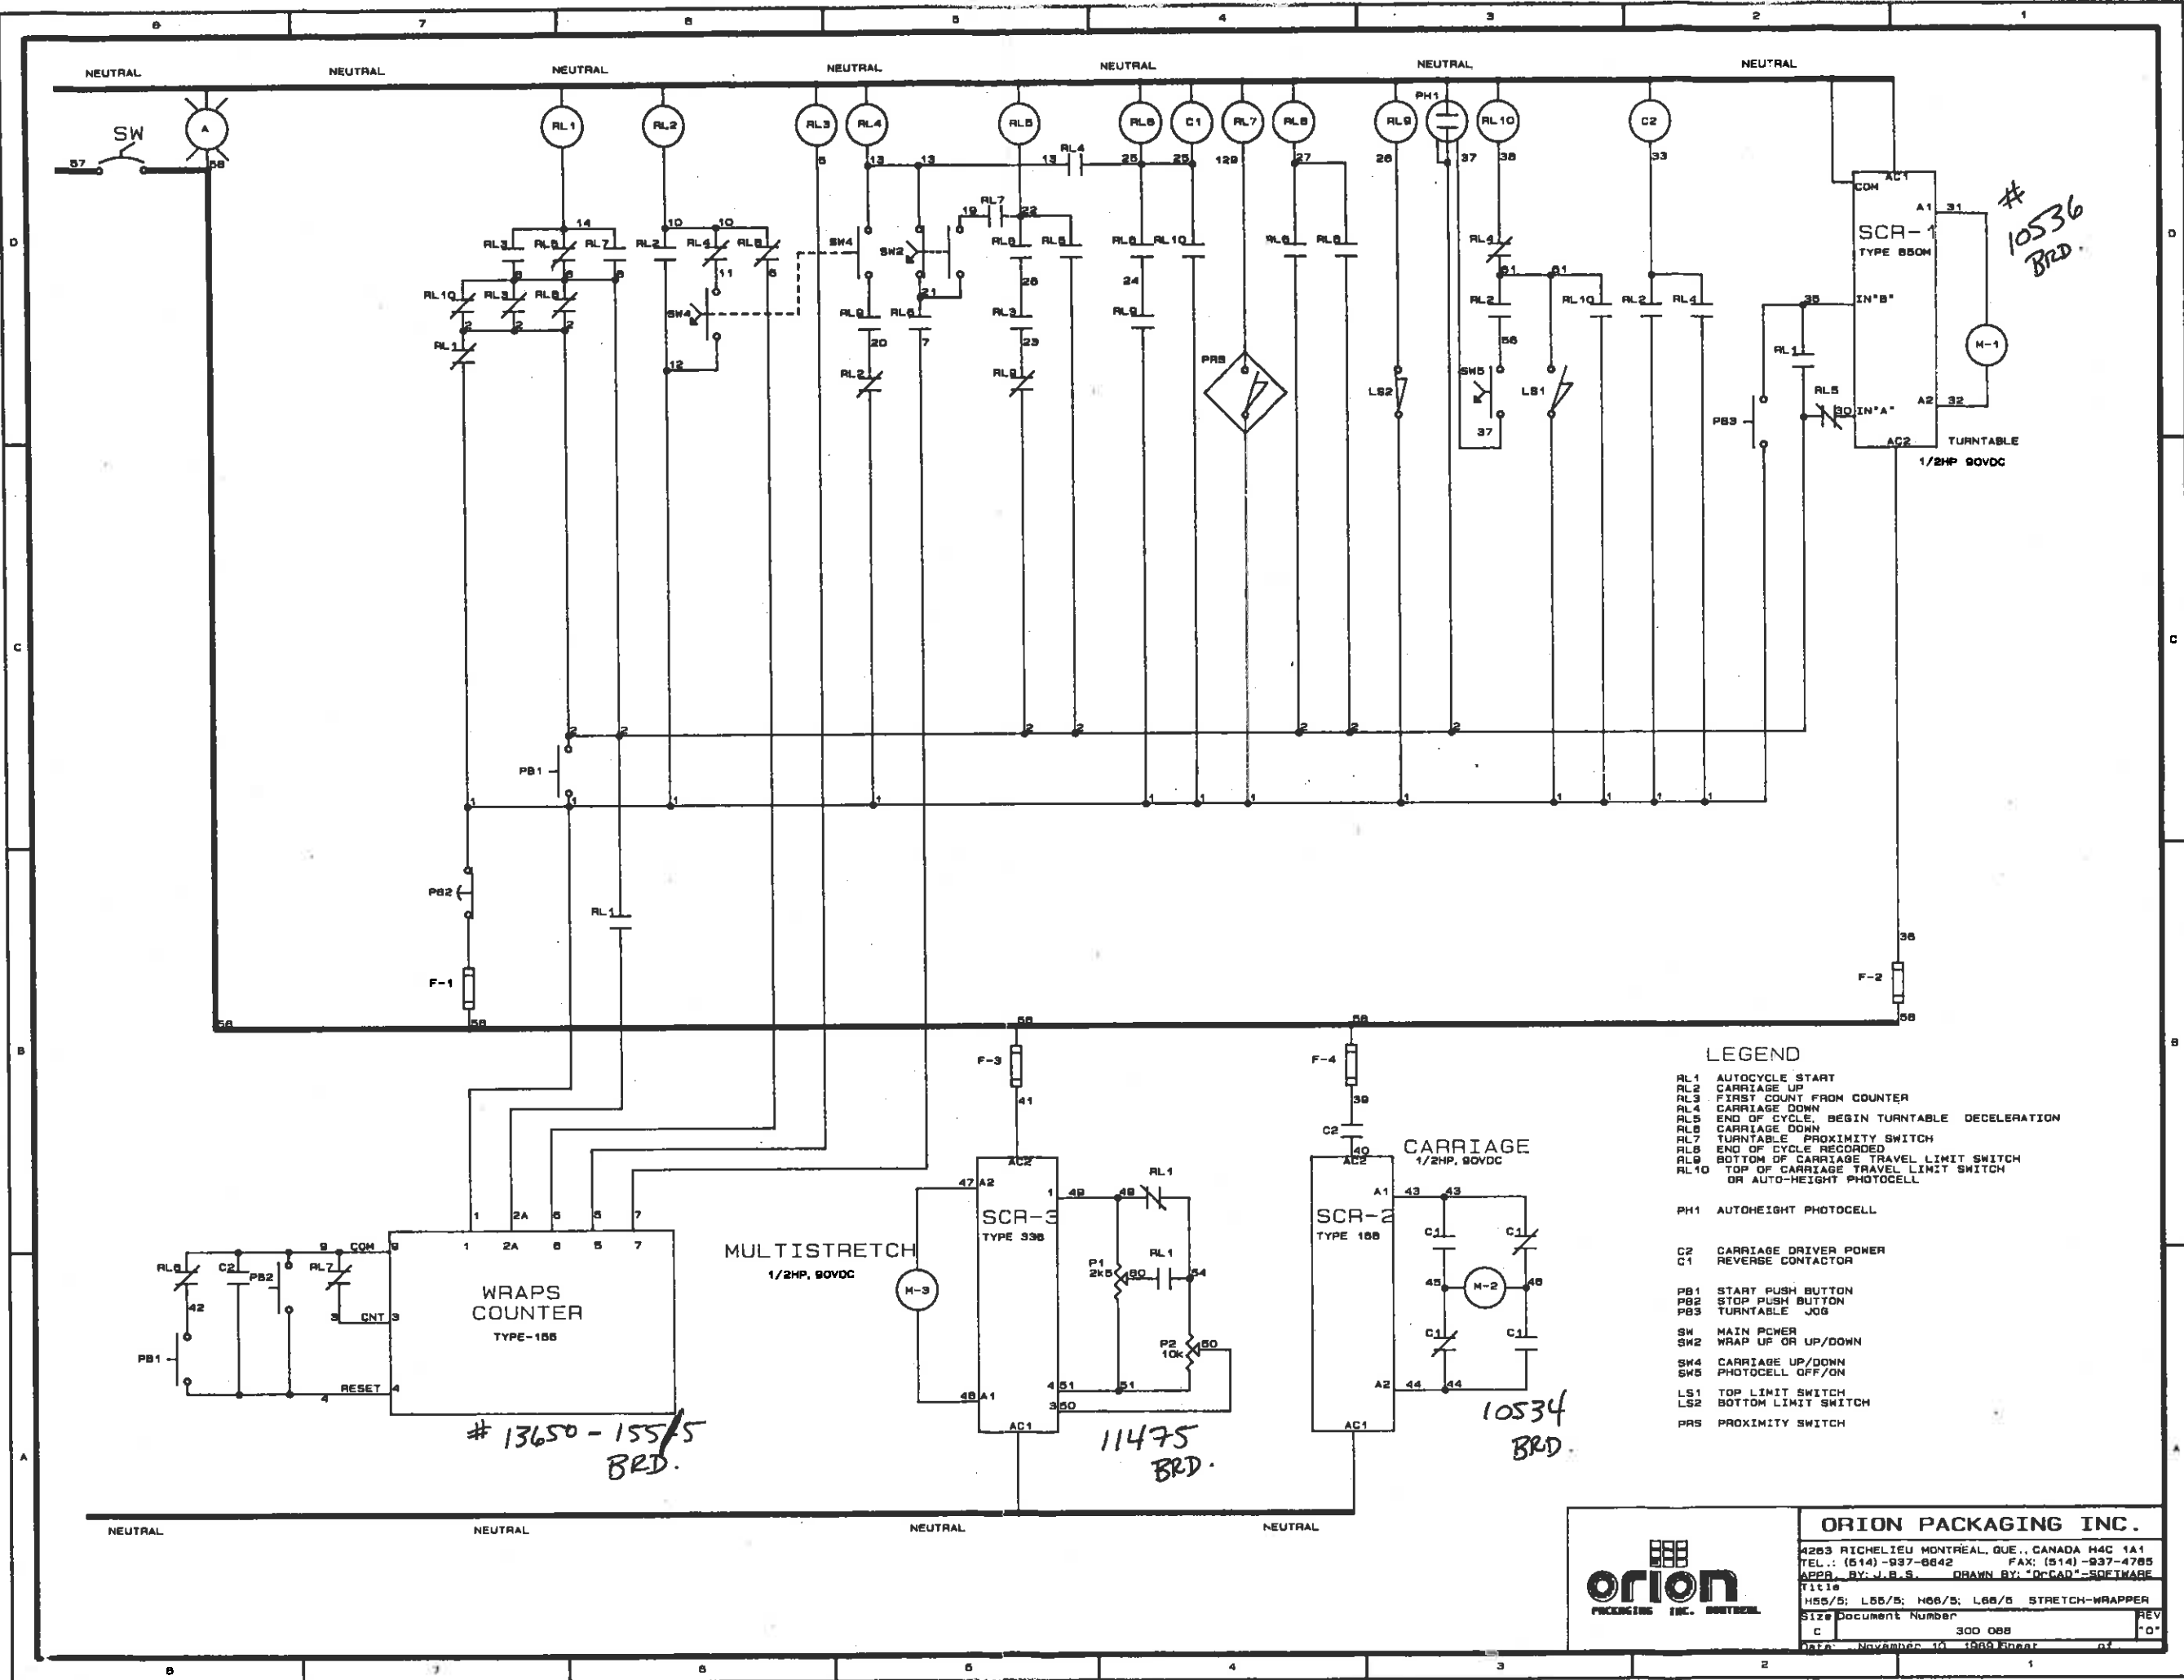

- LEGEND**
- RL1 AUTOCYCLE START
 - RL2 CARRIAGE UP
 - RL3 FIRST COUNT FROM COUNTER
 - RL4 CARRIAGE DOWN
 - RL5 END OF CYCLE, BEGIN TURNTABLE DECELERATION
 - RL6 CARRIAGE DOWN
 - RL7 TURNTABLE PROXIMITY SWITCH
 - RL8 END OF CYCLE RECORDED
 - RL9 BOTTOM OF CARRIAGE TRAVEL LIMIT SWITCH
 - RL10 TOP OF CARRIAGE TRAVEL LIMIT SWITCH OR AUTO-HEIGHT PHOTOCELL
 - PH1 AUTOHEIGHT PHOTOCELL
 - C2 CARRIAGE DRIVER POWER REVERSE CONTACTOR
 - C1 CARRIAGE DRIVER POWER
 - PB1 START PUSH BUTTON
 - PB2 STOP PUSH BUTTON
 - PB3 TURNTABLE JOG
 - SW MAIN POWER
 - SW2 WRAP UP OR UP/DOWN
 - SW4 CARRIAGE UP/DOWN PHOTOCELL OFF/ON
 - LS1 TOP LIMIT SWITCH
 - LS2 BOTTOM LIMIT SWITCH
 - PRS PROXIMITY SWITCH

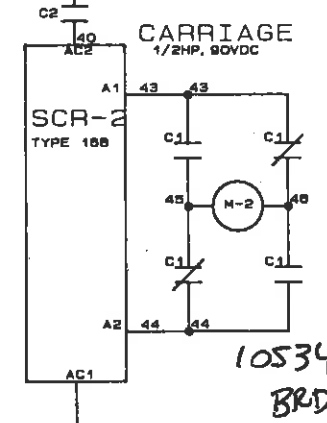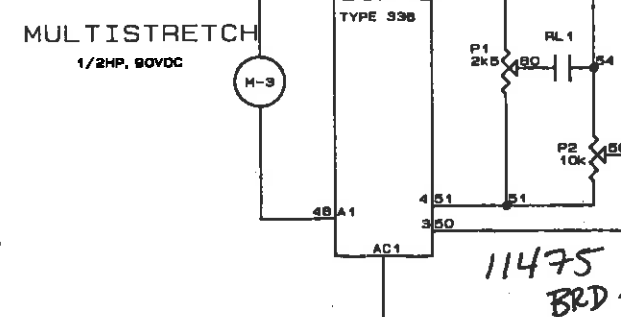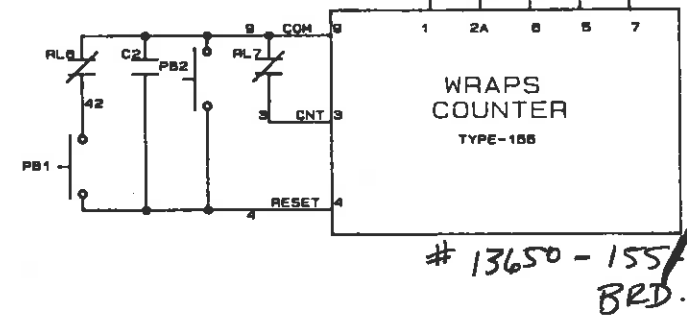



ORION PACKAGING INC.
4263 RICHELIEU MONTREAL, QUE., CANADA H4C 1A1
TEL.: (514) 937-8642 FAX: (514) 937-4785
APPR. BY: J.B.S. DRAWN BY: "OCAD"-SOFTWARE
Title: H55/5; L55/5; H66/5; L66/5 STRETCH-WRAPPER
Size: Document Number
C 300 088
Date: November 10, 1988

| REV | REV |
|-----|-----|
| 0 | 0 |