12/2/2011 Page 1 of 3

Procedure Steps	
Procedure: Installing a Pneumatic Slip Ring	
Steps	Illustration
Loosen and remove set screws on the base of the slip ring.	
Hold the retraction bar in place while tightening to the base of the slip ring.	
Using a transfer punch, dimple where the set screws are going to go.	
Disassemble the slip ring.	



Steps	Illustration
Using a 7/32" drill bit, drill the	
punched dimples so that the set screws will hold in place. NOTE: Do	
not drill all the way through the	
neck shaft.	
Place the slip ring lid back on the	
slip ring. And tighten set screws	
with pink Loctite.	
Use a dial indicator to align the slip	
ring position.	



